
tenera"

 
Installation Instructions

Tenera Sheer Shadings Auto-Lift, Continuum, Sure-Lift, Cordless, System II, EZ Charge, and Auto-Wand


Thank you for choosing Tenera Sheer Shadings. With proper installation and care, your new shades will provide many years of beauty and performance.

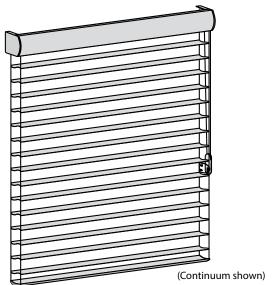






Standard Shade

 

 2-On-1 Headrail (Continuum and Sure-Lift Only)




Mounting Surface	Fastener	
Wood	#6 Hex Head Provided	
Drywall, Plaster	Wall Anchors Not Provided	
Metal	Sheet Metal Not Provided	Same (

Shade Width	Brackets Required
12" - 36"	2
36 1/16" - 79"	3
79 1/16" - 96"	4
96 1/16" - 108"	5


INSTALL THE BRACKETS

Inside Mount

- Measure 2" from each jamb for bracket location. If more than two brackets came with your order, space additional brackets evenly between the two and mark their location. Allow a minimum of 18" between the brackets at the motor end for the battery wand (Auto-Lift).
- Determine whether or not to remove any tabs from the installation brackets. If using a back cover, use pliers to remove both tabs from the brackets. If using battery wand without back cover, leave both tabs on brackets.
- If using a satellite battery pack or DC power supply without a back cover, remove the **top** tab (Auto-Lift).
- Mount brackets using the screws provided. Be sure the front edges of the brackets are aligned and level to each other. Shim the brackets if necessary. Important: Do not overtighten the screws.

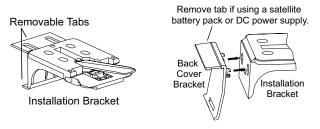

 Shadings with Optional Satellite Battery Pack or DC Power Supply




Auto-Lift Shade

Tenera Installation Instructions

INSTALL THE BRACKETS (Cont.)

Outside Mount

 - Center the headrail over the window opening at the desired height and lightly mark each end on a flat mounting surface.
- Mark 2" from each end of the headrail. Allow a minimum of 18" between the brackets at the motor end for the battery wand.
- Use pliers to break off both removable tabs from the brackets. (Removed top tabs can be used as shims when needed.)
- Center the installation / extension brackets on your marks and mount flush against the mounting surface using the screws provided. Use drywall anchors if necessary. Be sure the top of the installation brackets are aligned.







Installation Bracket

Optional Extension Brackets or Spacer Blocks

- If using extension brackets, attach them to the mounting surface. Then attach installation bracket to the underside of each extension bracket using the screws and speed nuts provided.

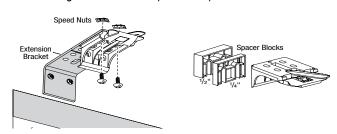


 - If using spacer blocks, the solid side of the spacer block faces the mounting surface. Attach the spacer blocks with the installation bracket using two screws long enough for secure mounting. Use a maximum of three 1/2" spacer blocks per installation bracket.




End Mount

 - Use pliers to break off both removeable tabs from the installation brackets.
- If you ordered a back cover, attach the back cover brackets to the installation bracket.
- Mount extension brackets to each side of the opening at the desired height of the shading. Mounting surface must be vertical and flat.
- Attach the installation brackets to the extension brackets using the provided screws and speed nuts.




INSTALL THE SHADE

 For Auto-Lift, take care when handling the antenna wire attached to the motor cartridge. Do not cut or remove this antenna. If you have an external eye, plug it into the 3-pin port on the back of the shade, being sure the plug is oriented correctly.




- Position the shade so that the front (colored fabric) faces you.

- Slide the headrail into the installation brackets so the edge of the headrail is between the lever and the bracket as shown.
- Firmly push the headrail into each bracket until it clicks and the lever snaps to the right side of the bracket.
- Important: Carefully pull on the headrail at each bracket to ensure it is installed securely.

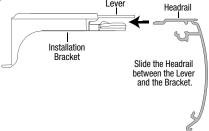


MOUNT BATTERY WAND INTO WAND CLIPS (AUTO-LIFT ONLY)

 - Place the battery wand with its socket toward the motor end of the shade.
- Push the battery wand straight up into the battery wand clips until it snaps into place. Check to make sure the wand is secure.



If you have a DC power Supply with Daisy-Chain Connectors (AUTO-LIFT ONLY)

- The daisy chain feature allows up to three battery-powered shades to be powered by a single DC power supply. Each shade has its own receiver eye and can operate independently.
- Route the power cables from each shade to the connector, using an extension cable, if necessary.
- Plug an extension cable into the connector and the DC power supply. Two extension cables and two connectors are used for three shades.

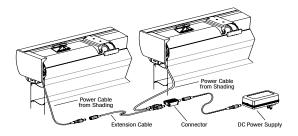

INSTALL CORD TENSIONER (CONTINUUM ONLY)

See Cord Tension Lock Installation Instructions

INSTALL OPTIONAL MAGNETIC HOLD-DOWNS

- Fully lower shade.
- Line up magnetic ball of hold-down bracket with bottom rail.
- Mark with a pencil and secure to the wall or door.



TEST THE SHADE - AUTO-LIFT

Auto-Lift - Test the Shade Using the Manual Control Button

 
- Press the manual control button on the bottom of the motor side end cap to test operation.
- Press the button to alternately lower, stop, and raise the shade.

Auto-Lift - Remote Operation


- For information regarding operation and programming of the remote control, refer to your Remote Control Guide.

IF SKEWING OCCURS...

- If the fabric winds unevenly or starts to rub against one end of the headrail, check that the headrail and installation brackets are level and aligned in the window.
- If the headrail is level and the installtion brackets are aligned, adjust the bottom rail weight.
 - > Flip up the bottom rail to access the bottom rail weight.



 - > To release the weight clip, insert a flat blade screwdriver into the weight clip and turn clock- wise.
- > Move the weight in 1" increments toward the side where the fabric is gathering.



- > Lower the shade all the way and check that the bottom rail is level. Adjust the weight until the fabric winds evenly and does not gather on either side.
- > Secure the weight clips in position by turning them counter clockwise after making the adjustment.

CAUTIONARY NOTES:

- Sheer Shadings are highly engineered textiles, but like any fabric, there are some visible variations, which are normal and not product defects.
- Slight wrinkles, puckers or other variations may appear and are inherent to this product.
- The three-inc vane fabric will narrow slightly at the headrail and bottom rail.
- If shadings are ordered at the same time, with identical color and height, vane alignment can be guaranteed within 1/4". This must be requested at tiem of order.
- Vane alignment cannot be specified on motorized shadings due to motor variations.

 






REMOVING THE SHADE

- Fully raise the shade.
- Disconnect the power source and the external eye from the power cable at the back of the shade (Auto-Lift).
- Move each lever of the installation brackets to the left to release the shade.



Move the lever to the left to release the shading.

CARE AND CLEANING

Regular light dusting with a feather duster is all the cleaning that is needed in most circumstances. For deeper cleaning, vacuum gently with a soft brush attachment. Blow away dirt and debris between the vanes using clean compressed air.



Three-inch vane fabrics narrow slightly at the bottom rail. In addition, the bottom rail pivot supwhen the vanes are fully open.

