

EZ-Charge V2

Multi-Channel Remote



FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions

- [1] This device may not cause harmful interface, and
- [2] This device must accept any interference received, including interference that may cause undesired operation.


Package Contents

- 1 x 15 channel remote
- 1 x magnetic holder including wall fixing screws
- 1 x 3V CR2450 battery


Installation

Wall Mount Holder

Remove cover from base by prying with flat head screwdriver

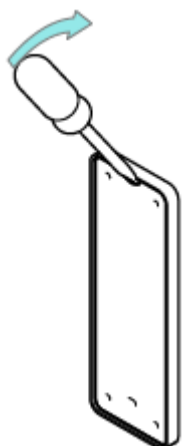

Used supplied fasteners and anchors to attach the base to the wall

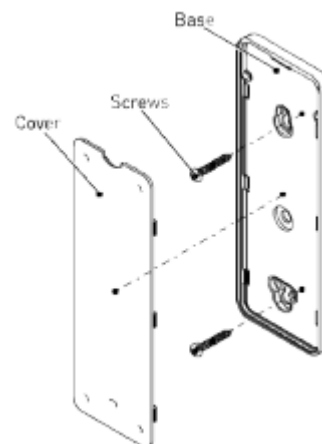


Replace cover by pressing snap latches into place.

Battery

Remove cover from remote press gently in and down to disengage cover.



Install battery with positive (+) side facing up.

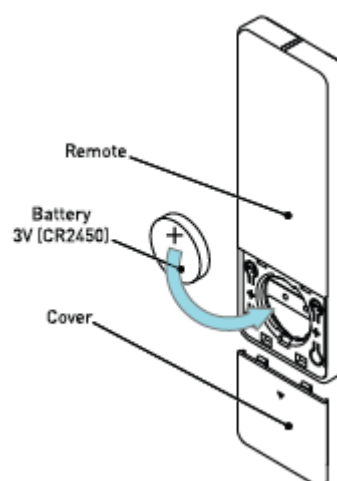


Programming

Pairing Motor to a Remote

Select channel on controller



Hold **P1** button on the motor head for 1 jog

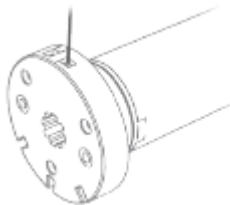

Hold **STOP** on controller



Motor Response



Motor Response



Check Motor Direction

To check travel direction of shade, press **UP** or **DOWN** on controller.



To reverse shade direction, hold both **UP** and **DOWN**.



Motor Response



Setting Limits

Move shade to desired highest or lowest position by pressing the **UP** or **DOWN** buttons



Once you are at your upper limit, hold **UP** and **STOP**.



Holding **DOWN** will make the shade travel. Pressing **DOWN** button moves the shade in small movements. You must press the **STOP** button if the shade is traveling.

Once you are at your lower limit, hold **DOWN** and **STOP**.



Holding **UP** will make the shade travel. Pressing **UP** button moves the shade in small movements. You must press the **STOP** button if the shade is traveling.

DONE!

For Motorization Technical Support call 877-548-0612

Adjusting Upper Limit

You can do this at ANY position. Shade does not need to be at the current upper limit.

Hold **UP** and **STOP** on the controller.



Move shade to desired position



Hold **UP** and **STOP** on the controller.



Adjusting Lower Limit

You can do this at ANY position. Shade does not need to be at the current lower limit.

Hold **DOWN** and **STOP** on the controller.



Move shade to desired position




Hold **DOWN** and **STOP** on the controller.



Copy / Delete channels

Hold P1 button on the motor head for 1 jog.

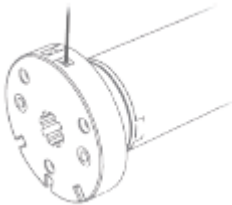

Select channel you wish to add or delete





Hold the **STOP** button on the controller



Delete All Settings



Hold P1 on the motor head for 4 continuous jogs

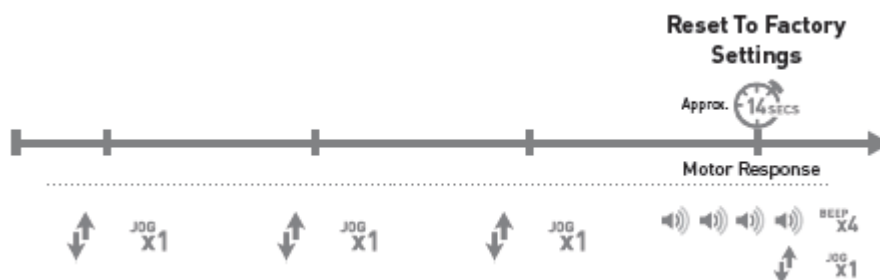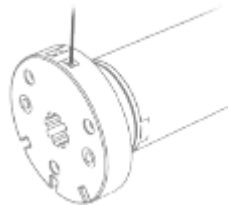

Putting motor to sleep

You will need to put a motor to sleep if you are going to program multiple shades on the same channel or adjust a limit for a specific shade on a group channel. To wake the shade up just press and release the P1 motor head button.

Hold P1 on the motor head
for 2 continuous jogs

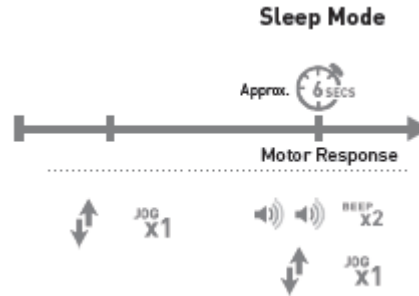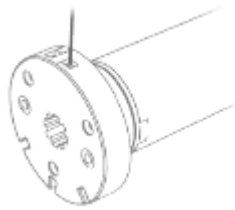

Favorite Position

Move shade to the desired favorite position



Remove battery door on remote.
Press and release P2 on the upper
left corner. The shade will jog once.



Press and release the **STOP**
button on the controller
and the shade will jog



Press and release the **STOP**
button on the controller
and the shade will jog



Tilt Mode

Hold **UP** and **DOWN** on the controller for 1 jog



Hold **UP** and **DOWN** on the controller for 1 jog



In this mode if you just press and release a direction the shade will only move in small increments. This is nice for the Transitional shades. If you want the shade to travel all the way up or all the way down, press and HOLD that direction. To exit this mode and revert back to Roller Mode, do the same steps.

Adjusting Motor Speed

Remove battery door on remote.
Press and release P2 on the upper left corner. The shade will jog once.



To Increase speed

Press **UP** shade will make 1 jog



Press **UP** shade will make 2 jogs



~~~~~

To decrease speed

Press **DOWN** shade will make 1 jog



Press **DOWN** shade will make 2 jogs



# EZ-Charge V2

## Surface Mounted Wireless Wall Switch



### FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions

- [1] This device may not cause harmful interface, and
- [2] This device must accept any interference received, including interference that may cause undesired operation.


### Package Contents

- 1 x Switch
- 1 x Single gang Decora style wall plate (incl 2 mounting screws)
- 1 x 3V CR2430 battery

# Installation

## Wall Mount Holder

Used supplied fasteners and anchors as needed to attach base.

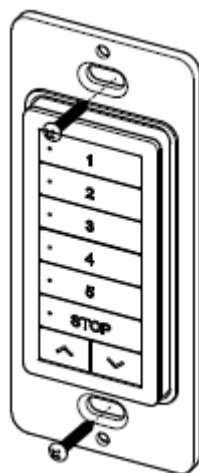


## Battery

Open rear battery cover by gently separating switch covers with screwdriver




Install CR2430 battery with positive side facing up. Snap covers back together.

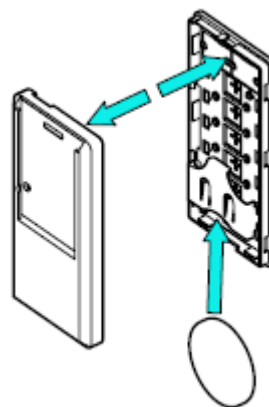


# Programming

## Pairing Motor to a Remote

 
Select channel on controller



Hold **P1** button on the motor head for 1 jog

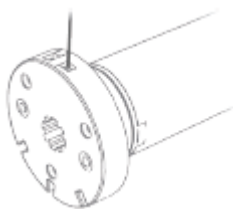

Hold **STOP** on controller

 

Motor Response



Motor Response



## Check Motor Direction

To check travel direction of shade, press **UP** or **DOWN** on controller.



To reverse shade direction, hold both **UP** and **DOWN**.



Motor Response



## Setting Limits

Move shade to desired highest or lowest position by pressing the **UP** or **DOWN** buttons



Once you are at your upper limit, hold **UP** and **STOP**.



Once you are at your lower limit, hold **DOWN** and **STOP**.



Holding **DOWN** will make the shade travel. Pressing **DOWN** button moves the shade in small movements. You must press the **STOP** button if the shade is traveling.

Holding **UP** will make the shade travel. Pressing **UP** button moves the shade in small movements. You must press the **STOP** button if the shade is traveling.

**DONE!**

For Motorization Technical Support call 877-548-0612

## Adjusting Upper Limit

You can do this at ANY position. Shade does not need to be at the current upper limit.

Hold **UP** and **STOP** on the controller.



Move shade to desired position



Hold **UP** and **STOP** on the controller.



## Adjusting Lower Limit

You can do this at ANY position. Shade does not need to be at the current lower limit.

Hold **DOWN** and **STOP** on the controller.



Move shade to desired position




Hold **DOWN** and **STOP** on the controller.




## Copy / Delete channels

Hold P1 button on the motor head for 1 jog.

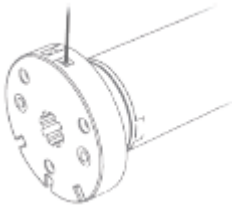

 Select channel you wish to add or delete





Hold the **STOP** button on the controller



## Delete All Settings



Hold P1 on the motor head for 4 continuous jogs

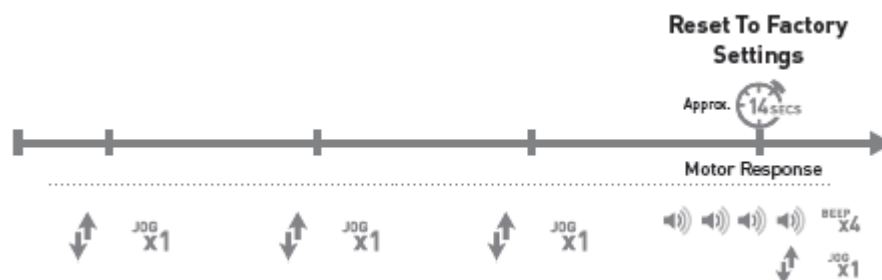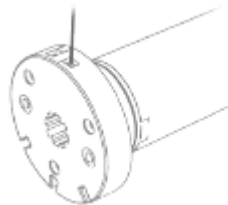

## Putting motor to sleep

You will need to put a motor to sleep if you are going to program multiple shades on the same channel or adjust a limit for a specific shade on a group channel. To wake the shade up just press and release the P1 motor head button.


Hold P1 on the motor head  
for 2 continuous jogs

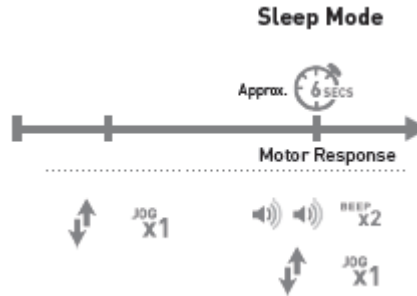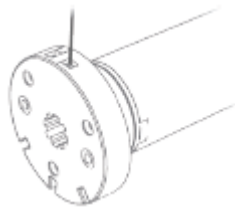

## Favorite Position

Move shade to the desired favorite position

On the backside of the wall switch  
find the P2 button. Press and release  
this button. The shade will jog once.

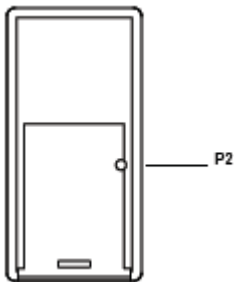

Press and release the **STOP**  
button on the controller  
and the shade will jog



Press and release the **STOP**  
button on the controller  
and the shade will jog



## Tilt Mode

Hold **UP** and **DOWN** on the controller for 1 jog



Hold **UP** and **DOWN** on the controller for 1 jog



In this mode if you just press and release a direction the shade will only move in small increments. This is nice for the Transitional shades. If you want the shade to travel all the way up or all the way down, press and HOLD that direction. To exit this mode and revert back to Roller Mode, do the same steps.

## Adjusting Motor Speed

To Increase speed

Press **UP** shade will make 1 jog



Press **UP** shade will make 2 jogs



To decrease speed

Press **DOWN** shade will make 1 jog



Press **DOWN** shade will make 2 jogs



On the backside of the wall switch find the P2 button. Press and release this button. The shade will jog once.

