



LOUVER INSTALLATION FOR PLANTATION LOUVER MOVER™

Tools required: Metal putty knife (with sharpened edge)
Hammer (plastic mallet preferred)
Offset needle nose pliers
Utility knife
Louver Pin for Louver Mover (1) #12-0403-000
Tension Control Louver Pin (1) 12-0310-000

- 1) Remove the existing louver if necessary.
- 2) Insert the louver pin (12-0403-000) into one end of the louver.
- 3) Tilt the louvers in the panel to the open position. Slide the new louver between the stiles inserting the pinned end into the louver pin hole.
- 4) Place new Tension Control louver pin (12-0310-00) into vacant hole.
- 5) Using the tip of the utility knife blade, depress the pin against the spring until it recesses into the hole in the stile.
- 6) Slide the louver over the pin and pull the utility knife from between the louver and the pin.
- 7) Slowly move the louver across the pin until the pin pops into the louver hole.



18-4620-19 June 2010