

# Installation Instructions



[Standard Transitional Shades \(Small and Large Cassette\)](#)

[Board Mounted Transitional Shades](#)

[Accu-Rise Transitional Shades](#)

[Sure-Lift Transitional Shades](#)

[Sundown Transitional Shades](#)

[Couplitaire Transitional Shades](#)

[Modernaire Transitional Shades](#)

[Visionaire Transitional Shades](#)

[Sidelight Transitional Shades](#)

[System II Transitional Shades](#)

[EZ Charge Transitional Shades](#)

[Auto-Wand Transitional Shades](#)

[Arches and Specialty Transitional Shades](#)

[Hold-Down Brackets for Transitional Shades](#)

# allure<sup>®</sup> Transitional Shades

## Installation Instructions

Small/Large Cassette, Small Cassette w/Accu-Rise, Sure-Lift, and Sundown



Tools Needed



#6 Hex Head Provided



Wall Anchors Not Provided



Sheet Metal Not Provided

Fasteners

Thank you for choosing Allure Transitional Shades. With proper installation and care, your new shades will provide many years of beauty and performance.


### Variations are the appeal of Allure...

The exclusive processes used in weaving these materials create distinctive variations and you may see various threads or slubs woven into the fabric creating light or dark colors intermittently dispersed throughout. These variations are intentional and add to the beauty and truly unique appearance of each shade.


### BEFORE INSTALLING

Remove shade from the package. Keep all packaging until the shade operates to your satisfaction. Contents of your hardware package may vary depending on options chosen. Additional fasteners may be needed based on your specific mounting surface.


**\*Important** - For shades with Accu-Rise, a plastic handle will be included in the hardware package. This handle **MUST** be installed after the shade installation for proper shade operation. (See Step 4)

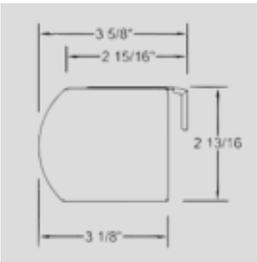


Small Cassette

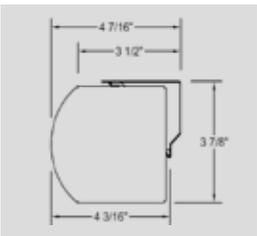


Large Cassette

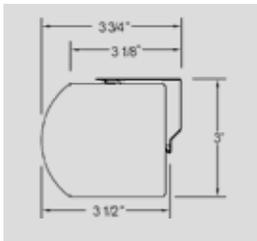


Sure-Lift Cassette

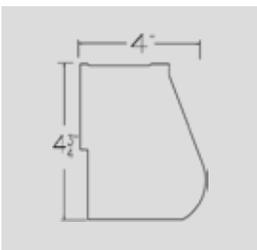


Sundown Cassette

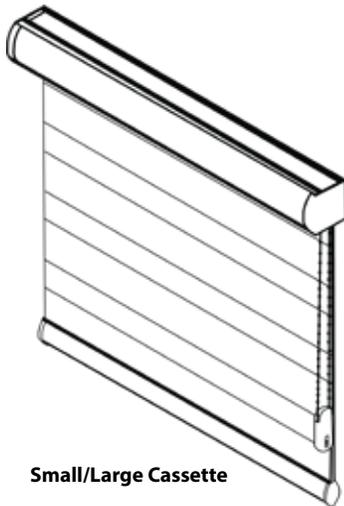


Small/Large Cassette

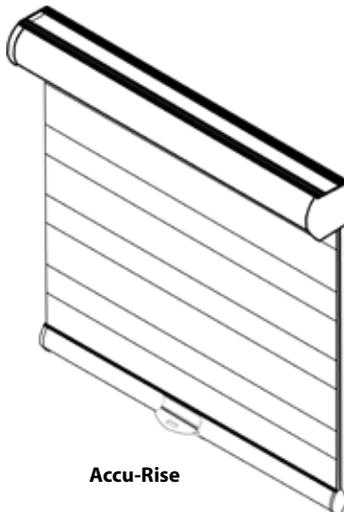

Accu-Rise

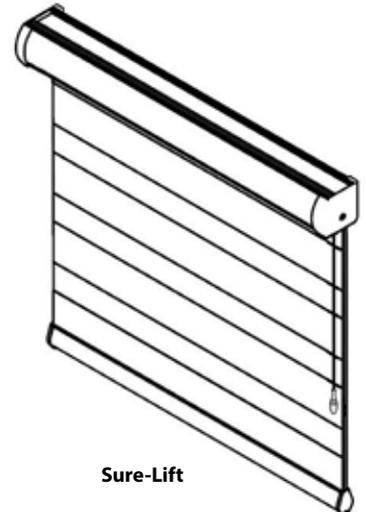

Sure-Lift

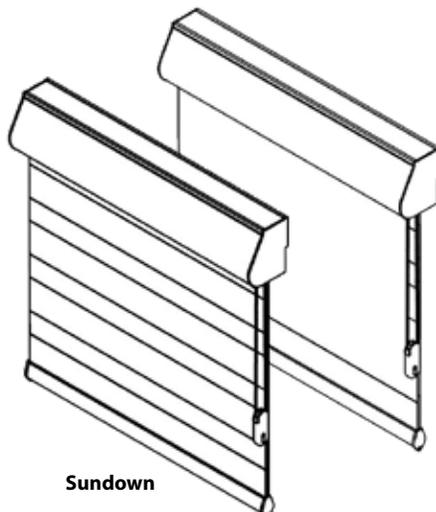


Sundown


BACK

# allure® Transitional Shades


## Installation Instructions

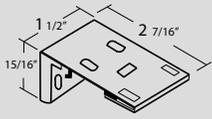


Small Cassette Bracket

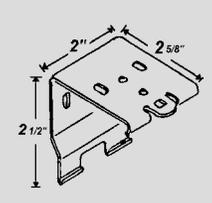


Large Cassette Bracket

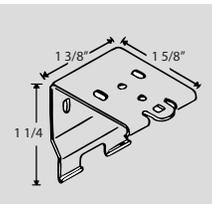


Sure-Lift Cassette Bracket

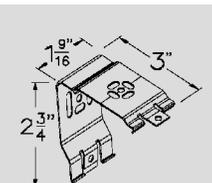

Sundown Cassette Bracket

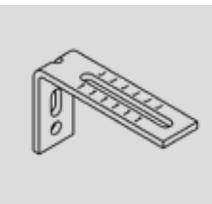

Optional  
2 3/4" Projection Bracket  
OR  
3 5/8" Projection Bracket

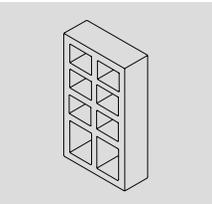


Optional Spacer Bracket

### INSTALL THE BRACKETS


#### Inside Mount

Measure 2" in from each end of the headrail and mark the bracket location on the mounting surface. Space additional brackets evenly between the end brackets.

Use two screws (and appropriate fasteners if needed) to attach each installation bracket to the top of the window. Brackets **must** be level and aligned.

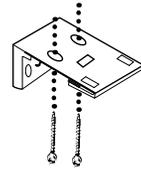

Small Cassette

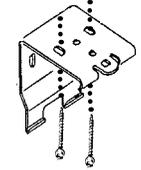

Large and Sure-Lift  
Cassette


### INSTALL THE BRACKETS

#### Outside Mount


Measure 2" in from each end of the headrail and mark the bracket location on the mounting surface. Space additional brackets evenly between the end brackets.

Use two screws (and appropriate fasteners if needed) to attach each installation bracket to the top of the window. The tops of the brackets **must** be level and aligned at the same height.


If an extension bracket is being used, attach the installation bracket after the extension bracket is installed.

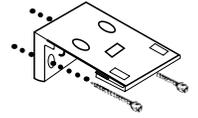


Small Cassette

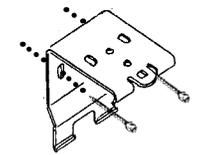

Large and Sure-Lift  
Cassette

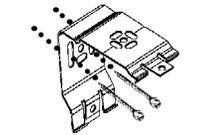

Sundown Cassette

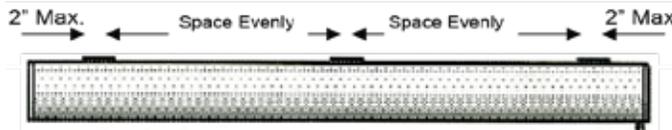

## Step 1

Shade Width	Brackets Required	2-On-1 Headrail
15" - 48"	2	If using 2-On-1 headrail option, a center bracket is required at center gap.
48 1/16" - 72"	3	
72 1/16" - 90"	4	
90 1/16" - 120"	5	
120 1/16" - 156"	6	

### INSTALL THE SHADE

#### Inside Mount

> Small Cassette

Hold the shade and tilt the top front of the headrail 45° toward the window.

Insert the anodized spring-loaded plate on the front of the bracket into the front groove on the top of the headrail, push the back of the headrail up, and pull forward until it stops. Pull down on headrail to ensure shade is secure.

> Large and Sure-Lift Cassette

End caps are not attached to Large Cassette to avoid damage in shipping. Attach end caps before installing the shade.

Hold the shade and tilt the top front of the headrail 45° toward the room.

Insert the bottom back of the headrail into the prongs on the bottom of the bracket, and tilt the headrail up, pushing back, until the prongs on the front of the bracket snap into the headrail.

### INSTALL THE SHADE

#### Outside Mount

> Small Cassette

Hold the shade and tilt the top front of the headrail 45° toward the window.

Insert the anodized spring-loaded plate on the front of the bracket into the front groove on the top of the headrail, push the back of the headrail up, and pull forward until it stops. Pull down on headrail to ensure shade is secure.

> Large, Sure-Lift and Sundown Cassette

Hold the shade and tilt the headrail 45° toward the room. Insert the groove on the bottom backside of the headrail into the prongs on the bottom back of the bracket. Push the top of the headrail up until it snaps into the front of the bracket.

## Step 2

# allure® Transitional Shades

## Installation Instructions

### ADJUSTING THE LOWER STOP

#### Inside/Outside Mount - Right Control

1. Measure how much shade needs to be raised or lowered. (IB)
2. Remove shade from window opening. (IB)
3. Remove cassette cover opposite of clutch (idle end of the shade)
4. Lower shade to original lower limit.
5. Pull slightly on chain to create slack in clutch.
6. Insert large flat blade screwdriver into end of shade.
7. Turn clockwise to raise shade or counter clockwise to lower shade.
8. Pull on chain to make sure desired length is correct. If not, repeat steps 5 - 7.
9. Reattach cassette cover (and return shade to window opening if (IB).

#### Inside/Outside Mount - Left Control

Follow steps 1 - 6 above.

7. Turn counter clockwise to raise shade or clockwise to lower shade.
8. Reattach cassette cover (and return shade to window opening if (IB).

## Step 3

### REMOVE THE SHADE (if necessary)

#### Small Cassette


To remove shade from spring loaded bracket, raise the shade and push in on the top front of the headrail.

Tilt the bottom of the shade toward the room to remove from the brackets.

#### Large, Sure-Lift or Sundown Cassette

Push the top of the cassette towards the window, then insert a flat blade screwdriver into the release tab and twist.

Tilt the shade toward the room to remove from the brackets.

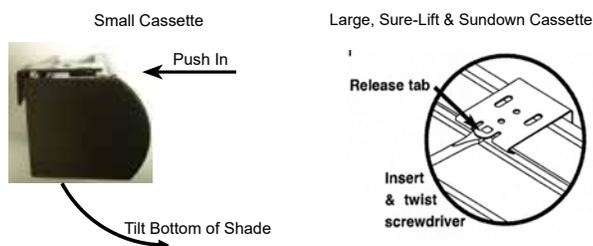

### INSTALL CORD TENSION LOCK

See Cord Tension Lock installation Instructions

### INSTALL HOLD-DOWNS (Optional)

See Hold-Down Installation instructions

### INSTALL HANDLE/HANDLES (Accu-Rise Only)

At center of bottom rail, place a small pencil mark. Push handle onto rail until securely in place, then adjust right or left to center.

If your shade is wider than 48" you will be supplied with 2 handles to install. Push handles onto rails from each end and slide until handles are spaced 18" from center.

Two handles ensure that wider shades are pulled with even tension so that the fabric does not get damaged.

## Step 4

### CARE AND CLEANING

Allure Transitional Shades have an extraordinary and remarkable self-dusting feature. Simply roll the shade up into the headrail and back down again to remove dust. The shading can be feather dusted or vacuumed at a low setting. Spots can be cleaned with a damp sponge and mild soap. To avoid discoloration, do not use chemical cleaners. Ultrasonic cleaning is not recommended. It will damage the shade.

**Note:** In dry conditions, static may occur causing front and back panels to stick together or fabric to wave. If this happens, please spray with anti-static guard. This may have to be done periodically to eliminate static buildup. Recommended brand is "Static Guard".

# allure<sup>®</sup> Transitional Shades




Tools Needed

#6 Hex Head  
Provided



Wall Anchors  
Not Provided

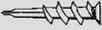

Sheet Metal  
Not Provided



Fasteners

## Installation Instructions

System II, Sonesse 30 WireFree, EZ Charge, and Auto-Wand


Thank you for choosing Allure Transitional Shades. With proper installation and care, your new shades will provide many years of beauty and performance.

### Variations are the appeal of Allure...


The exclusive processes used in weaving these materials create distinctive variations and you may see various threads or slubs woven into the fabric creating light or dark colors intermittently dispersed throughout. These variations are intentional and add to the beauty and truly unique appearance of each shade.

### BEFORE INSTALLING


Remove shade from the package. Keep all packaging until the shade operates to your satisfaction. Contents of your hardware package may vary depending on options chosen. Additional fasteners may be needed based on your specific mounting surface.

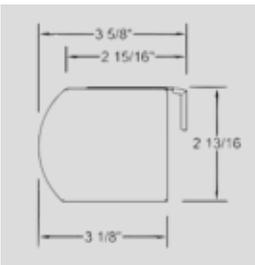


Small Cassette

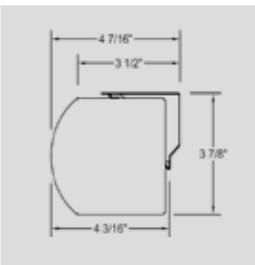


Large Cassette

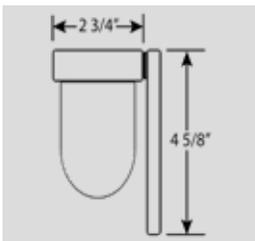

Board Mounted

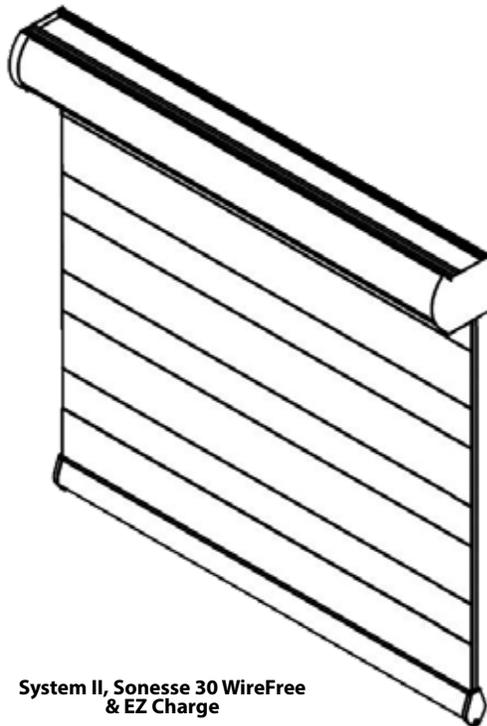


System II, Sonesse 30 WireFree & EZ Charge

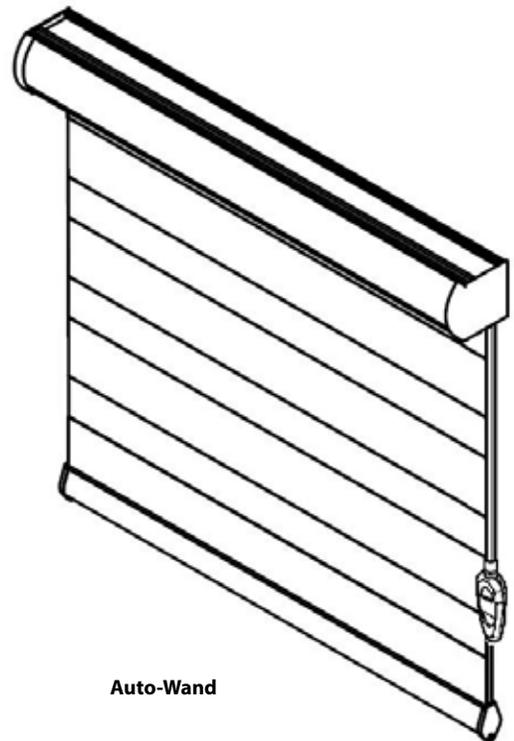


Auto-Wand

# allure® Transitional Shades


## Installation Instructions

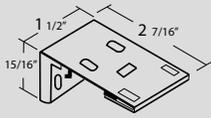


Small Cassette Bracket

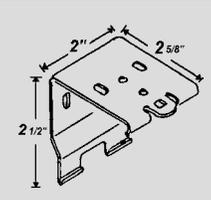


Large Cassette Bracket

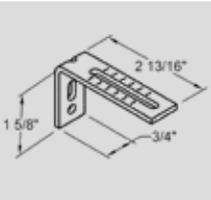

Board Mounted Bracket

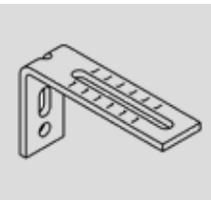

2 3/4" Projection Bracket  
OR  
3 5/8" Projection Bracket

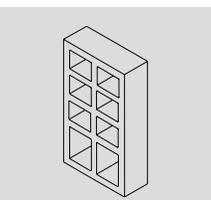


Optional Spacer Bracket

### INSTALL THE BRACKETS


#### Inside Mount

Measure 2" in from each end of the headrail and mark the bracket location on the mounting surface. Space additional brackets evenly between the end brackets.

Use two screws (and appropriate fasteners if needed) to attach each installation bracket to the top sill of the window.

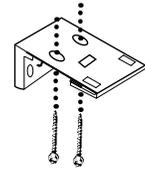

Small Cassette

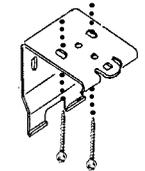

Large Cassette


### INSTALL THE BRACKETS

#### Outside Mount


Measure 2" in from each end of the headrail and mark the bracket location on the mounting surface. Space additional brackets evenly between the end brackets.

Use two screws (and appropriate fasteners if needed) to attach each installation bracket to the top sill of the window. The tops of the brackets must be level and aligned at the same height. If an extension bracket is being used, attach the installation bracket after the extension bracket is installed.


For board mounted, mount first bracket by putting a screw into the slotted hole of the bracket. Repeat process on the other side. If center support is needed, evenly space it between the left and right bracket. Once level, tighten the screw and place an additional screw in the round hole of the bracket.

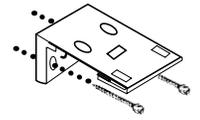


Small Cassette

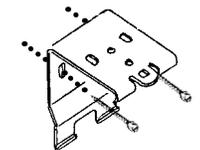

Large Cassette

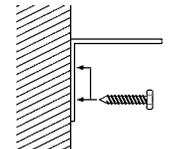

Board Mounted

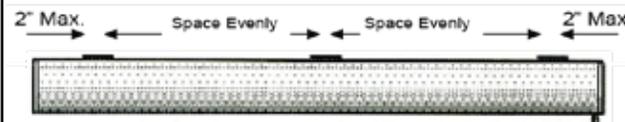

### Step 1

Shade Width	Brackets Required	2-On-1 Headrail
15" - 48"	2	If using 2-On-1 headrail option, a center bracket is required at center gap.
48 1/16" - 72"	3	
72 1/16" - 90"	4	
90 1/16" - 120"	5	
120 1/16" - 156"	6	

### INSTALL THE SHADE

#### Inside Mount

##### > Small Cassette

Hold the shade and tilt the top front of the headrail 45° toward the window.

Insert the anodized spring-loaded plate on the front of the bracket into the front groove on the top of the headrail, push the back of the headrail up, and pull forward until it stops. Pull down on headrail to ensure shade is secure.

##### > Large Cassette


End caps are not attached to Large Cassette to avoid damage in shipping. Attach end caps before installing the shade.

Hold the shade and tilt the top front of the headrail 45° toward the room.

Insert the bottom back of the headrail into the prongs on the bottom of the bracket, and tilt the headrail up, pushing back, until the prongs on the front of the bracket snap into the headrail.

##### > Board Mounted

Measure 2" in from the ends of the headrail and mark the screw location on the mounting surface. Space additional screws evenly between the screws. Starting in front of the shade at each end, alternate screws in front and behind shade. Pre-drill the headrail vertically with a 3/16" drill bit before securing with screws. Snap shade into brackets already attached to board.

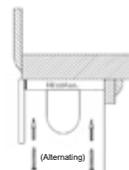

Board Mounted

### INSTALL THE SHADE

#### Outside Mount

##### > Small Cassette

Hold the shade and tilt the top front of the headrail 45° toward the window.

Insert the anodized spring-loaded plate on the front of the bracket into the front groove on the top of the headrail, push the back of the headrail up, and pull forward until it stops. Pull down on headrail to ensure shade is secure.


##### > Large Cassette

Hold the shade and tilt the headrail 45° toward the room. Insert the groove on the bottom backside of the headrail into the prongs on the bottom back of the bracket.

Push the top of the headrail up until it snaps into the front of the bracket.

##### > Board Mounted

Place 3/4" screw up from the bottom to the front of the shade, and into the slotted part of the bracket for board mounted Allure. Snap shade into brackets already attached to board.

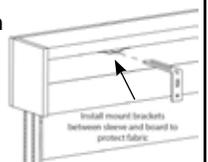

### Step 2

# allure<sup>®</sup> Transitional Shades


## Installation Instructions

### ADJUST THE SHADE (if necessary) (This will require resetting motor limits)

Any product that rolls on a tube or roller has a potential to skew. All shades are checked for skewing at the time of inspection. The factory will shim the roller if necessary to assure your shades are rolling straight. When installing, make sure the brackets are level. If the brackets are off by even as little as 1/8", skewing can occur.

If shade veers toward the right, lower completely and place a 4" strip of masking tape on the roller on the left side. Repeat as necessary until a straight roll is achieved. (Fig. A)

If shade veers toward the left, lower completely and place a 4" strip of masking tape on the roller on the right side. Repeat as necessary until a straight roll is achieved. (Fig. B)

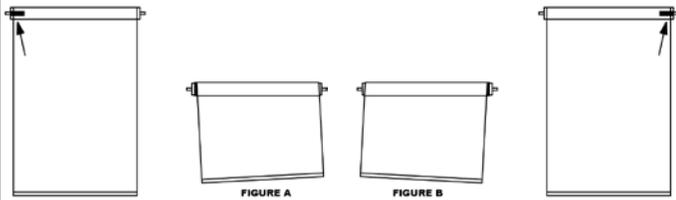

### Step 3

### CONNECT THE MOTOR


#### EZ Charge and Sonesse 30 WireFree

No additional motor installation needed.

#### System II

Make sure that the program button on the motor head is positioned in the installation brackets so it is easily accessible. Ideally on an open roll installation, the motor head button should be facing downwards towards the floor so you can see it. If in a cassette, Lafayette will already have the motor installed in the cassette to make it easy for you to reach. You will be required to press/hold this button during the programming sequence or to reset the motor.

Connect your proper power source. Properly load the batteries into the battery wand as described on the wand itself. If you are powering the motor via a transformer or hardwiring, connect the wires according to your state and local wiring codes.

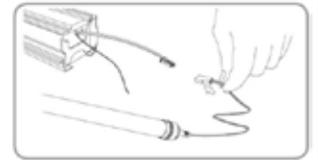

#### Auto-Wand

Plug wand into the motor.

For programming, see Programming Instructions.



### Step 4

### ATTACH THE VALANCE (board mounted)

Attach the valance to the velcro strip attached to the headrail.

### Step 5

### REMOVE THE SHADE (if necessary)

#### Small Cassette


To remove shade from spring loaded bracket, raise the shade and push in on the top front of the headrail.

Tilt the bottom of the shade toward the room to remove from the brackets.

#### Large Cassette

Push the top of the cassette towards the window, then insert a flat blade screwdriver into the release tab and twist.

Tilt the shade toward the room to remove from the brackets.

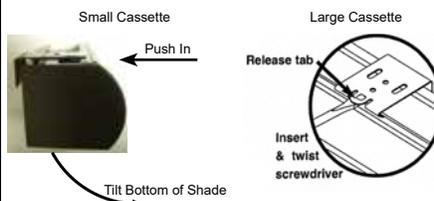

### CARE AND CLEANING

Allure Transitional Shades have an extraordinary and remarkable self-dusting feature. Simply roll the shade up into the headrail and back down again to remove dust. The shading can be feather dusted or vacuumed at a low setting. Spots can be cleaned with a damp sponge and mild soap. To avoid discoloration, do not use chemical cleaners. Ultrasonic cleaning is not recommended. It will damage the shade.

**Note:** In dry conditions, static may occur causing front and back panels to stick together or fabric to wave. If this happens, please spray with anti-static guard. This may have to be done periodically to eliminate static buildup. Recommended brand is "Static Guard".



18-8004-BMOT NOV. 2018

# allure<sup>®</sup> Transitional Shades

## Installation Instructions Couplitaire and Board Mounted




Tools Needed

#6 Hex Head  
Provided



Wall Anchors  
Not Provided

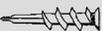

Sheet Metal  
Not Provided



Fasteners

Thank you for choosing Allure Transitional Shades. With proper installation and care, your new shades will provide many years of beauty and performance.


### Variations are the appeal of Allure...

The exclusive processes used in weaving these materials create distinctive variations and you may see various threads or slubs woven into the fabric creating light or dark colors intermittently dispersed throughout. These variations are intentional and add to the beauty and truly unique appearance of each shade.


### BEFORE INSTALLING

Remove shade from the package. Keep all packaging until the shade operates to your satisfaction. Contents of your hardware package may vary depending on options chosen. Additional fasteners may be needed based on your specific mounting surface.


**\*Important** - For shades with Accu-Rise, a plastic handle will be included in the hardware package. This handle **MUST** be installed after the shade installation for proper shade operation. (See Step 5)

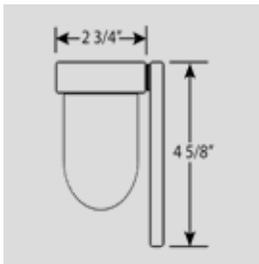


Board Mounted

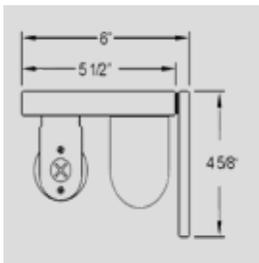


Couplitaire

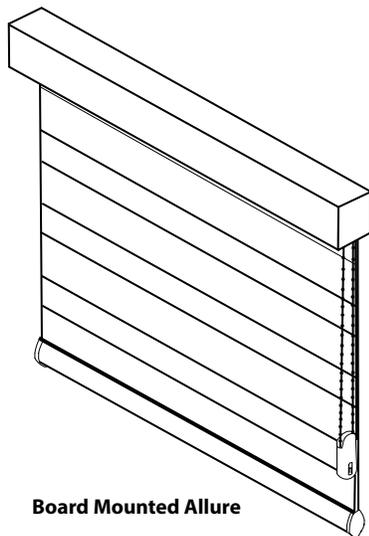


Board Mounted Allure

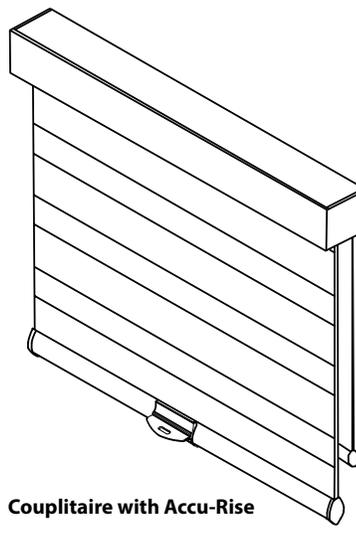

Couplitaire with Accu-Rise

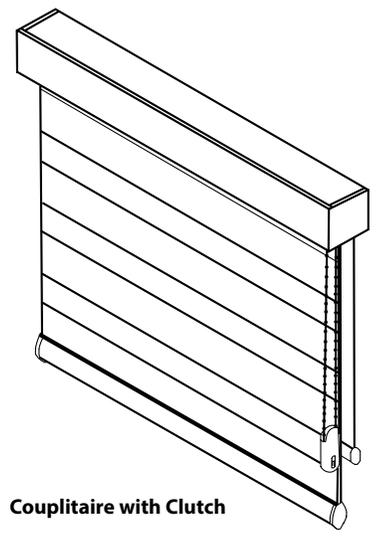


Couplitaire with Clutch

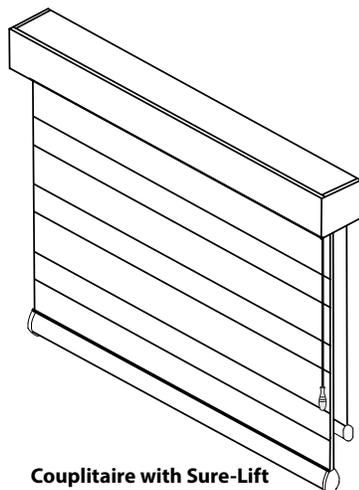


Couplitaire with Sure-Lift

# allure® Transitional Shades

## Installation Instructions

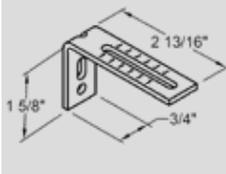

Board Mounted/  
Couplitaire Bracket

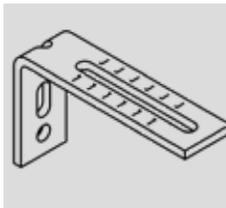

2 3/4" Projection Bracket  
OR  
3 5/8" Projection Bracket

### INSTALL THE BRACKETS

#### Inside Mount

- > Couplitaire - No Brackets Required
- > Board Mounted - No Brackets Required

### INSTALL THE BRACKETS



#### Outside Mount

Measure 2" in from each end of the headrail and mark the bracket location on the mounting surface. Space additional brackets evenly between the end brackets.

Mount first bracket by putting a screw into the slotted hole of the bracket. Repeat process on the other side. If center support is needed, evenly space it between the left and right bracket.

Place a 4' level on top of brackets and adjust the brackets up or down as needed to assure they are level.

Once level, tighten the screw and place an additional screw in the round hole of the bracket.

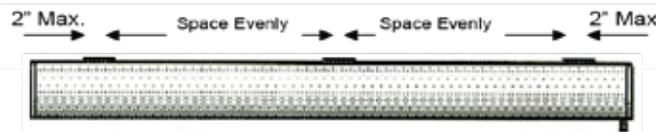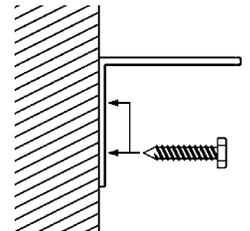

Shade Width	Brackets Required	2-On-1 Headrail
15" - 48"	2	If using 2-On-1 headrail option, a center bracket is required at center gap.
48 1/16" - 72"	3	
72 1/16" - 90"	4	
90 1/16" - 120"	5	
120 1/16" - 156"	6	

## Step 1

### INSTALL THE SHADE

#### Inside Mount


> Couplitaire  
Place a screw 2" in from each end. Space additional screws evenly between the screws.  
Between the two shades, pre-drill the headrail vertically with a 3/16" drill bit before securing with screws.

Operate the shade for proper operation and adjust if necessary.


> Board Mounted Allure  
Place a screw 2" in from each end. Space additional screws evenly between the screws.  
Starting in front of the shade at each end, alternate screws in front and behind shade. Pre-drill the headrail vertically with a 3/16" drill bit before securing with screws.

Snap shade into brackets already attached to board.

Operate the shade for proper operation and adjust if necessary.

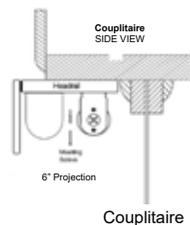

Couplitaire

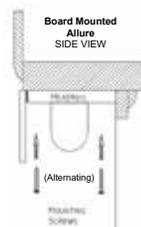

Board Mounted

### INSTALL THE SHADE


#### Outside Mount

Place shade on to mounted brackets and evenly adjust the shade side to side for optimal coverage of the window.

Place a 3/4" screw up from the bottom, in between the shades, and into the slotted part of the bracket for Couplitaire.

Place 3/4" screw up from the bottom to the front of the shade, and into the slotted part of the bracket for board mounted Allure. Snap shade into brackets already attached to board.

Operate the shade for proper operation and adjust if necessary.

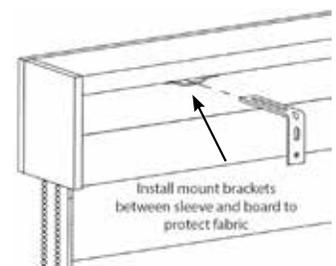

## Step 2


## Installation Instructions

### ADJUST THE SHADE (if necessary) (Back shade only)

Any product that rolls on a tube or roller has a potential to skew. All shades are checked for skewing at the time of inspection. The factory will shim the roller if necessary to assure your shades are rolling straight. When installing, make sure the brackets are level. If the brackets are off by even as little as  $\frac{1}{8}$ " , skewing can occur.

If shade veers toward the right, lower completely and place a 4" strip of masking tape on the roller on the left side. Repeat as necessary until a straight roll is achieved. (Fig. A)

If shade veers toward the left, lower completely and place a 4" strip of masking tape on the roller on the right side. Repeat as necessary until a straight roll is achieved. (Fig. B)

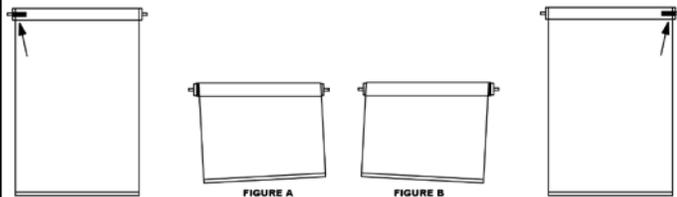

### Step 3

### ADJUSTING THE LOWER STOP

#### Inside/Outside Mount - Right Control

1. Measure how much shade needs to be raised or lowered. (IB)
2. Remove shade from window opening. (IB)
3. Remove cassette cover opposite of clutch (idle end of the shade)
4. Lower shade to original lower limit.
5. Pull slightly on chain to create slack in clutch.
6. Insert large flat blade screwdriver into end of shade.
7. Turn clockwise to raise shade or counter clockwise to lower shade.
8. Pull on chain to make sure desired length is correct. If not, repeat steps 5 - 7.
9. Reattach cassette cover (and return shade to window opening if (IB).

#### Inside/Outside Mount - Left Control

Follow steps 1 - 6 above.

7. Turn counter clockwise to raise shade or clockwise to lower shade.
8. Reattach cassette cover (and return shade to window opening if (IB).

### Step 4

### ATTACH THE VALANCE

Attach the valance to the velcro strip attached to the headrail

### INSTALL HANDLE (Accu-Rise Only)

At center of bottom rail, place a small pencil mark. Push handle onto rail until securely in place, then adjust right or left to center.

### Step 5

### INSTALL CORD TENSION LOCK

See Cord Tension Lock installation Instructions

### INSTALL HOLD-DOWNS (Optional)

See Hold-Down Installation instructions

### Step 6

### CARE AND CLEANING

Allure Transitional Shades have an extraordinary and remarkable self-dusting feature. Simply roll the shade up into the headrail and back down again to remove dust. The shading can be feather dusted or vacuumed at a low setting. Spots can be cleaned with a damp sponge and mild soap. To avoid discoloration, do not use chemical cleaners. Ultrasonic cleaning is not recommended. It will damage the shade.

**Note:** In dry conditions, static may occur causing front and back panels to stick together or fabric to wave.

If this happens, please spray with anti-static guard. This may have to be done periodically to eliminate static buildup. Recommended brand is "Static Guard".

# allure<sup>®</sup> Transitional Shades



Tools Needed

## Installation Instructions

### Modernaire

Thank you for choosing Allure Transitional Shades. With proper installation and care, your new shades will provide many years of beauty and performance.

#### Variations are the appeal of Allure...

The exclusive processes used in weaving these materials create distinctive variations and you may see various threads or slubs woven into the fabric creating light or dark colors intermittently dispersed throughout. These variations are intentional and add to the beauty and truly unique appearance of each shade.

#6 Hex Head Provided



Wall Anchors Not Provided




Sheet Metal Not Provided




Fasteners

#### BEFORE INSTALLING

Remove shade from the package. Keep all packaging until the shade operates to your satisfaction. Contents of your hardware package may vary depending on options chosen. Additional fasteners may be needed based on your specific mounting surface.

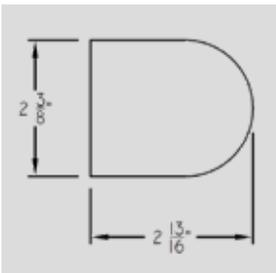


Modernaire

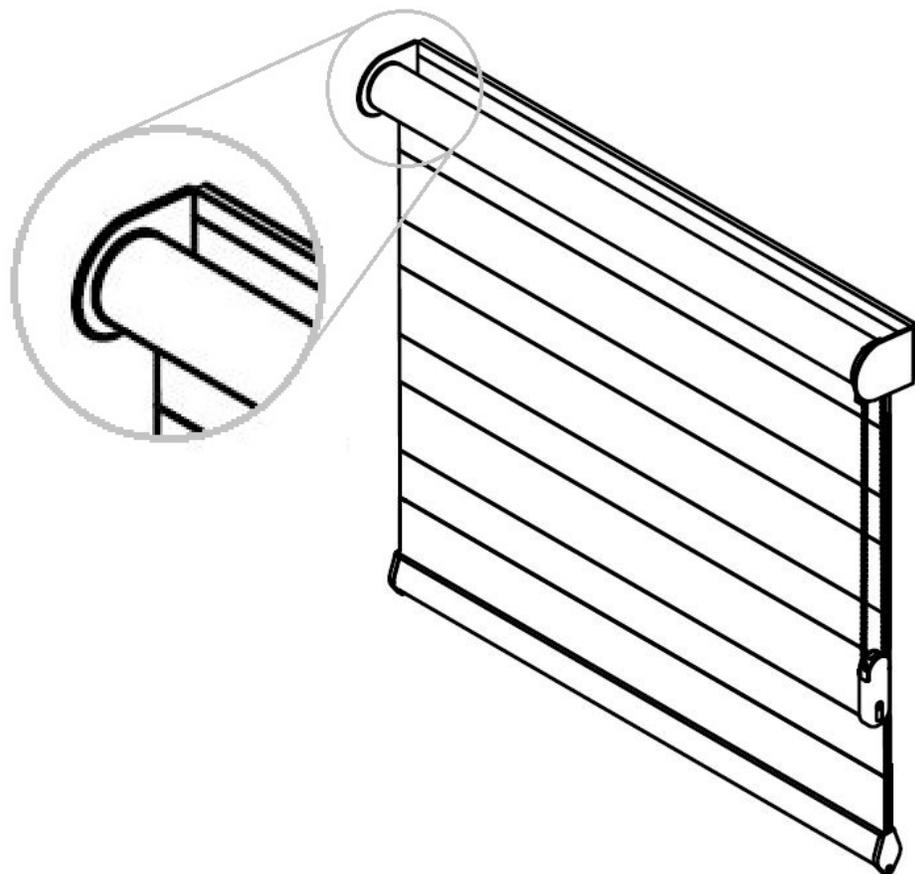


# allure<sup>®</sup> Transitional Shades

## Installation Instructions

Brackets Required		
Shade Width	15" - 48"	2
	48 1/16" - 72"	3
	72 1/16" - 90"	4
	90 1/16" - 120"	5
	120 1/16" - 156"	6

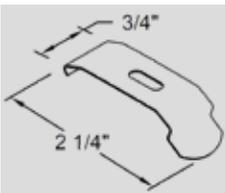

Modernaire Bracket

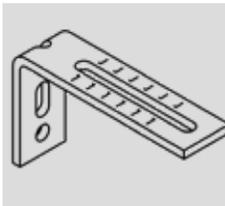


2 3/4" Projection Bracket  
OR  
3 5/8" Projection Bracket

### INSTALL THE BRACKETS

#### Inside Mount

Mount using the top bracket hole. Make sure the release tab is always mounted to the back.

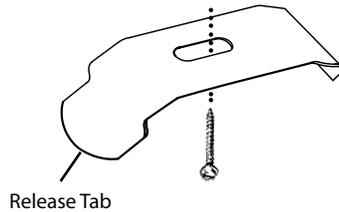


Release Tab

### INSTALL THE BRACKETS


#### Outside Mount

Measure 2" in from each end of the headrail and mark the bracket location on the mounting surface. Space additional brackets evenly between the end brackets.

Mount first bracket by putting a screw into the slotted hole of the bracket. Make sure the release tab is always mounted to the bottom. Repeat process on the other side. If center support is needed, evenly space it between the left and right bracket. Brackets must be level to ensure proper operation.

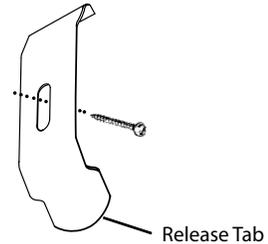

Release Tab

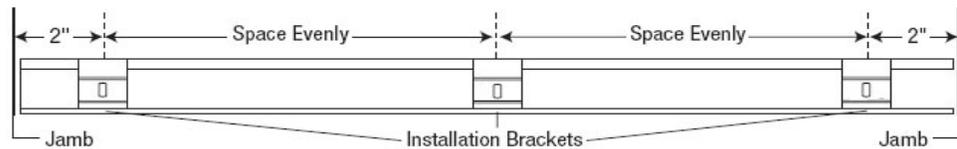

## Step 1

### INSTALL THE SHADE

#### Inside Mount

Hook the front channel of the headrail to the front of the bracket. Press firmly up on back of shade to snap in.

Operate the shade for proper operation and adjust if necessary.

### INSTALL THE SHADE

#### Outside Mount

Hook the top channel of the headrail to the top of the bracket. Press shade firmly back to snap in.

Operate the shade for proper operation and adjust if necessary.

## Step 2

# allure<sup>®</sup> Transitional Shades


## Installation Instructions

### ADJUST THE SHADE (if necessary)

Any product that rolls on a tube or roller has a potential to skew. All shades are checked for skewing at the time of inspection. The factory will shim the roller if necessary to assure your shades are rolling straight. When installing, make sure the brackets are level. If the brackets are off by even as little as 1/8", skewing can occur.

If shade veers toward the right, lower completely and place a 4" strip of masking tape on the roller on the left side. Repeat as necessary until a straight roll is achieved. (Fig. A)

If shade veers toward the left, lower completely and place a 4" strip of masking tape on the roller on the right side. Repeat as necessary until a straight roll is achieved. (Fig. B)

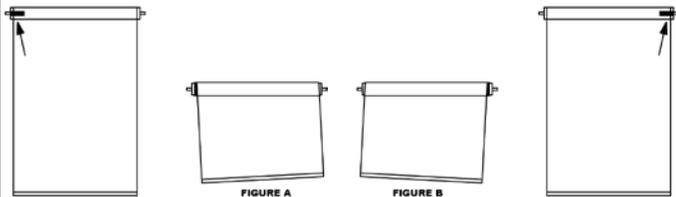

### Step 3

### ADJUSTING THE LOWER STOP

#### Inside/Outside Mount - Right Control

1. Measure how much shade needs to be raised or lowered. (IB)
2. Remove shade from window opening. (IB)
3. Remove cassette cover opposite of clutch (idle end of the shade)
4. Lower shade to original lower limit.
5. Pull slightly on chain to create slack in clutch.
6. Insert large flat blade screwdriver into end of shade.
7. Turn clockwise to raise shade or counter clockwise to lower shade.
8. Pull on chain to make sure desired length is correct. If not, repeat steps 5 - 7.
9. Reattach cassette cover (and return shade to window opening if (IB).

#### Inside/Outside Mount - Left Control

Follow steps 1 - 6 above.

7. Turn counter clockwise to raise shade or clockwise to lower shade.
8. Reattach cassette cover (and return shade to window opening if (IB).

### Step 4

### INSTALL CORD TENSION LOCK

See Cord Tension Lock installation Instructions

### INSTALL HOLD-DOWNS (Optional)

See Hold-Down Installation instructions

### Step 5

### CARE AND CLEANING

Allure Transitional Shades have an extraordinary and remarkable self-dusting feature. Simply roll the shade up into the headrail and back down again to remove dust. The shading can be feather dusted or vacuumed at a low setting. Spots can be cleaned with a damp sponge and mild soap. To avoid discoloration, do not use chemical cleaners. Ultrasonic cleaning is not recommended. It will damage the shade.

**Note:** In dry conditions, static may occur causing front and back panels to stick together or fabric to wave.

If this happens, please spray with anti-static guard. This may have to be done periodically to eliminate static buildup.

Recommended brand is "Static Guard".

### Step 6



18-8004-MODE NOV. 2018

# allure® Transitional Shades



Tools Needed

## Installation Instructions

### Visionaire

Thank you for choosing Allure Transitional Shades. With proper installation and care, your new shades will provide many years of beauty and performance.

#### Variations are the appeal of Allure...

The exclusive processes used in weaving these materials create distinctive variations and you may see various threads or slubs woven into the fabric creating light or dark colors intermittently dispersed throughout. These variations are intentional and add to the beauty and truly unique appearance of each shade.

#6 Hex Head  
Provided



Wall Anchors  
Not Provided




Sheet Metal  
Not Provided




Fasteners

#### BEFORE INSTALLING

Remove shade from the package. Keep all packaging until the shade operates to your satisfaction. Contents of your hardware package may vary depending on options chosen. Additional fasteners may be needed based on your specific mounting surface.

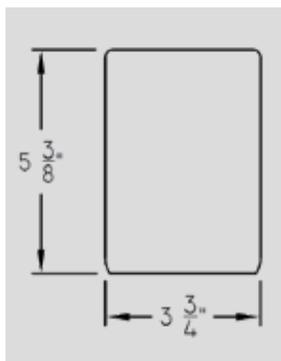


Visionaire

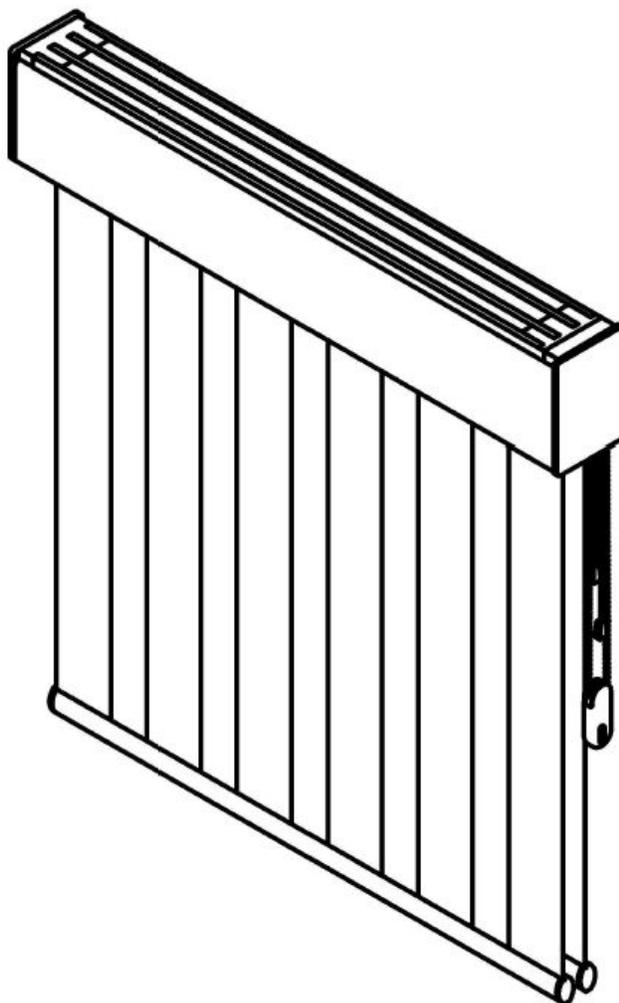


# allure® Transitional Shades

## Installation Instructions

Brackets Required	
Shade Width	16" - 36" 2
	36 1/16" - 72" 3
	72 1/16" - 108" 4
	108 1/16" - 144" 5

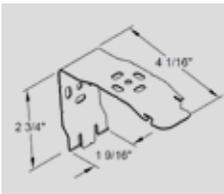

Visionaire Bracket

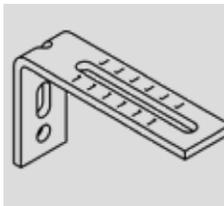

2 3/4" Projection Bracket



### INSTALL THE BRACKETS

#### Outside Mount ONLY

Measure 2" in from each end of the headrail and mark the bracket location on the mounting surface. Space additional brackets evenly between the end brackets.

Mount first bracket by putting a screw into the slotted hole of the bracket. Repeat process on the other side. If center support is needed, evenly space it between the left and right bracket.

Once level, tighten the screw and place an additional screw in the round hole of the bracket.

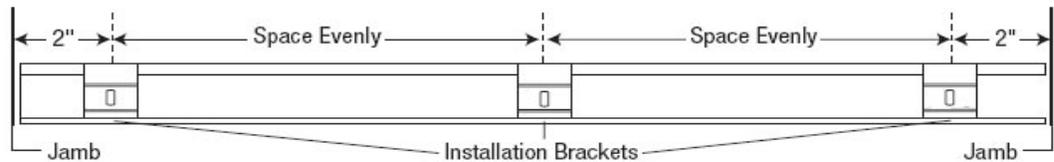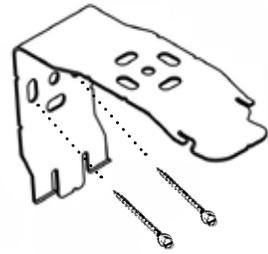

### Step 1

#### INSTALL THE SHADE

Hold the shade and tilt the bottom of the headrail 45° towards the room. Insert the anodized spring-loaded plate on the front of the bracket into the front groove on top of the headrail.

Push the back of the headrail up until it snaps into the back of the bracket.

If an extension bracket is being used, attach the installation bracket after the extension bracket is installed. Extension brackets provide up to an additional 1 1/8" clearance.

Operate the shade for proper operation and adjust if necessary.

### Step 2

#### INSTALL CORD TENSION LOCK

See Cord Tension Lock installation Instructions

#### INSTALL CORD CLEAT AND CASSETTE COVER

Attach the top part of the cassette cover to the grooves on top part of the headrail.

Push bottom part of the cassette cover back until it snaps in.

### Step 3

#### CARE AND CLEANING

Allure Transitional Shades have an extraordinary and remarkable self-dusting feature. Simply roll the shade up into the headrail and back down again to remove dust. The shading can be feather dusted or vacuumed at a low setting. Spots can be cleaned with a damp sponge and mild soap. To avoid discoloration, do not use chemical cleaners. Ultrasonic cleaning is not recommended. It will damage the shade.

**Note:** In dry conditions, static may occur causing front and back panels to stick together or fabric to wave. If this happens, please spray with anti-static guard. This may have to be done periodically to eliminate static buildup. Recommended brand is "Static Guard".



18-8004-VISI NOV 2018

# allure<sup>®</sup> Transitional Shades



Tools Needed

## Installation Instructions Sidelight

Thank you for choosing Allure Transitional Shades. With proper installation and care, your new shades will provide many years of beauty and performance.


### Variations are the appeal of Allure...

The exclusive processes used in weaving these materials create distinctive variations and you may see various threads or slubs woven into the fabric creating light or dark colors intermittently dispersed throughout. These variations are intentional and add to the beauty and truly unique appearance of each shade.

#6 Hex Head  
Provided



Wall Anchors  
Not Provided

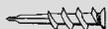


Sheet Metal  
Not Provided



Fasteners


### BEFORE INSTALLING

Remove shade from the package. Keep all packaging until the shade operates to your satisfaction. Contents of your hardware package may vary depending on options chosen. Additional fasteners may be needed based on your specific mounting surface.

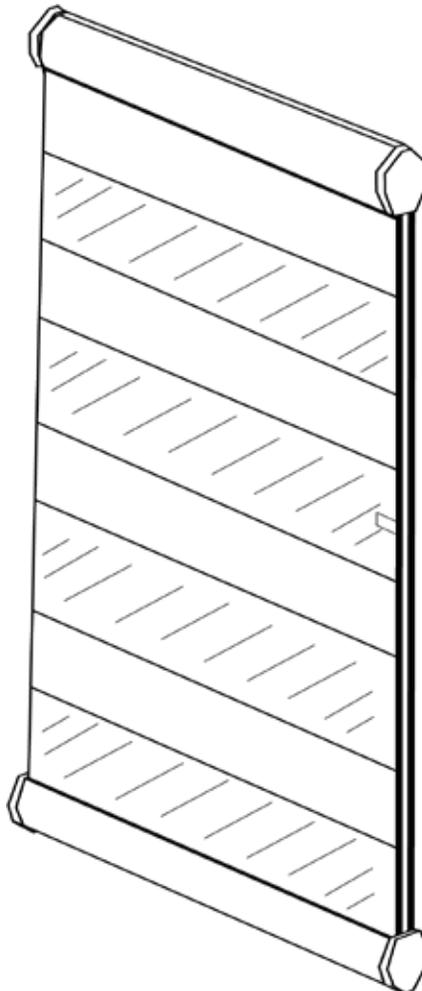


# allure® Transitional Shades

## Installation Instructions

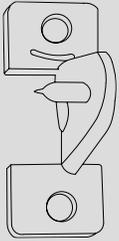

Sidelight Bracket

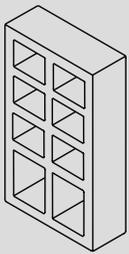

Spacer Block

### INSTALL THE BRACKETS

#### Outside Mount

Hold Sidelight shade evenly in window opening.

Make a pencil mark on right or left side of shade headrail. (Fig. A)

Place bracket on pencil mark (Fig. B), drill and tighten screws into the bracket.



Fig. A



Fig. B

### INSTALL THE BRACKETS AND SHADE

#### Inside Mount

Place right or left bracket into opening.

Insert shade into bracket while holding the other bracket into the end of the headrail. Place shade in desired depth of window opening.

While holding in place, drill and tighten front screw into bracket. (Fig. C)

Gently pull shade forward and reach behind to insert/drill back screw into bracket.



Fig. C

## Step 1 (OB)

## Step 1 & 2 (IB)

### INSTALL THE SHADE

#### Outside Mount

Place Sidelight shade onto the mounted bracket, while holding the other end bracket in shade and tilting up bottom of headrail to be level.

Making sure shade is level, drill and tighten top screw into bracket. (Fig. D)

Drill and tighten screw into bottom hole of the bracket. (Fig. E)



Fig. D



Fig. E

## Step 2 (OB)

### INSTALL ADHESIVE HEM GRIP

Peel backing from adhesive hem grip. At desired height for easy reach and operation, onto a **solid** vane of the front panel, wrap adhesive so half is adhered to the front side and the other half adhered to the back. (Fig. F)

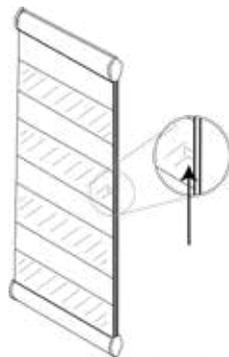


Fig. F

### INSTALL HOLD-DOWNS (Optional)

See Hold-Down Installation Instructions

## Step 3

### CARE AND CLEANING

Allure Transitional Shades have an extraordinary and remarkable self-dusting feature. Simply roll the shade up into the headrail and back down again to remove dust. The shading can be feather dusted or vacuumed at a low setting. Spots can be cleaned with a damp sponge and mild soap. To avoid discoloration, do not use chemical cleaners. Ultrasonic cleaning is not recommended. It will damage the shade.

**Note:** In dry conditions, static may occur causing front and back panels to stick together or fabric to wave. If this happens, please spray with anti-static guard. This may have to be done periodically to eliminate static buildup. Recommended brand is "Static Guard".



18-8004-SIDE NOV 2018

# allure® Transitional Shades




Tools Needed

## Installation Instructions Specialty Shapes

Thank you for choosing Allure Transitional Shades. With proper installation and care, your new shades will provide many years of beauty and performance.

### Variations are the appeal of Allure...




The exclusive processes used in weaving these materials create distinctive variations and you may see various threads or slubs woven into the fabric creating light or dark colors intermittently dispersed throughout. These variations are intentional and add to the beauty and truly unique appearance of each shade.

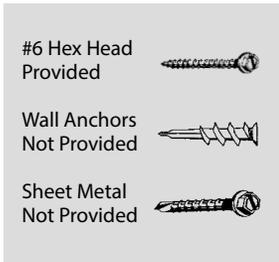

Fasteners

### BEFORE INSTALLING

Remove shade from the package. Keep all packaging until the shade operates to your satisfaction. Contents of your hardware package may vary depending on options chosen. Additional fasteners may be needed based on your specific mounting surface.

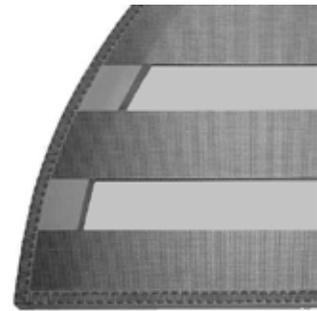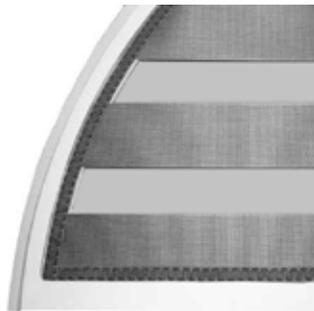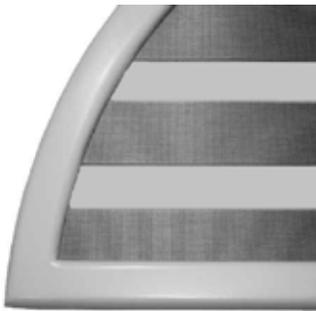

### INSTALL THE SHADE

#### Outside Mount (not recommended)

Drill and screw directly into board and into the mounting surface.

### INSTALL THE SHADE


#### Inside Mount

Installed with Button Catches  
Attach the catch to the mounting surface with a screw. The button screws into the board.

### CARE AND CLEANING

Allure Transitional Shades have an extraordinary and remarkable self-dusting feature. Simply roll the shade up into the headrail and back down again to remove dust. The shading can be feather dusted or vacuumed at a low setting. Spots can be cleaned with a damp sponge and mild soap. To avoid discoloration, do not use chemical cleaners. Ultrasonic cleaning is not recommended. It will damage the shade.

**Note:** In dry conditions, static may occur causing front and back panels to stick together or fabric to wave. If this happens, please spray with anti-static guard. This may have to be done periodically to eliminate static buildup. Recommended brand is "Static Guard".

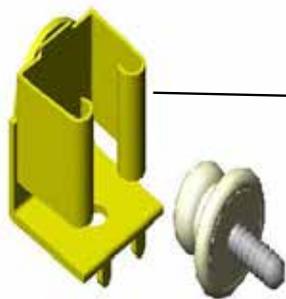

This piece screws into mounting surface

This piece screws into back of board

**Step 1**

BACK



18-8004-SPEC NOV 2018

# allure® Transitional Shades

## Installation Instructions Hold-Down Brackets




Tools Needed


Thank you for choosing Allure Transitional Shades. With proper installation and care, your new shades will provide many years of beauty and performance.

### Variations are the appeal of Allure...

The exclusive processes used in weaving these materials create distinctive variations and you may see various threads or slubs woven into the fabric creating light or dark colors intermittently dispersed throughout. These variations are intentional and add to the beauty and truly unique appearance of each shade.

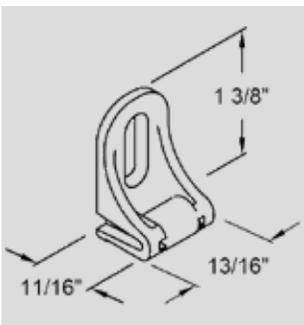

Magnetic Hold-Down Bracket

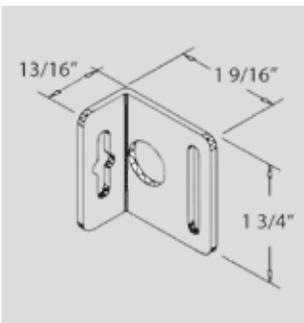

Optional Hold-Down Bracket

Hold downs are available for outside mount.

### INSTALL MAGNETIC HOLD-DOWN BRACKETS

Peel plastic film from magnetic strips and place on both ends of the backside of bottom rail. (Pic A)

Fully lower shade and set to closed position. Line up magnetic ball of hold-down bracket with top magnetic strip on the bottom rail. (Pic B)

Mark with a pencil and secure to the wall or door.

Shade can now be in closed or open position and will stay attached to magnetic hold-down bracket.



Magnetic strips




### INSTALL HOLD-DOWN BRACKETS (optional)

The pins are installed in the end caps on the bottom rail at the factory. Lower the shade and line up the bottom of the hold-down bracket with the bottom of the bottom rail.

Mark for the screws through the back of the hold-down bracket.

Screw hold-down to the wall or trim. Anchors (not included) may be required if screwing into drywall.

Tilt the bottom rail and insert each pin into the hold-down.

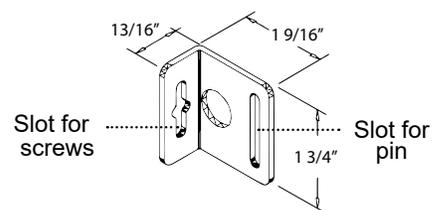

## Step 1