

## Installation Instructions

## Decorative Dual Brackets


## Thank You

Thank you for choosing Genesis Custom Window Shades.  
 With proper installation and care, your new shades will provide many years of beauty and performance.


## Before Installing

Remove shade from the package. Keep all packaging until shade operates to your satisfaction. Contents of your hardware package may vary depending on options chosen.  
 Additional fasteners may be needed on your specific mounting surface.


## Tools

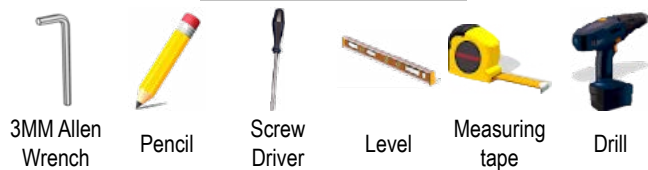


## Fasteners

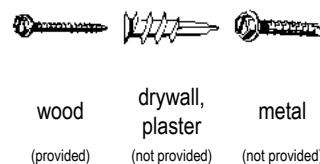

## Brackets

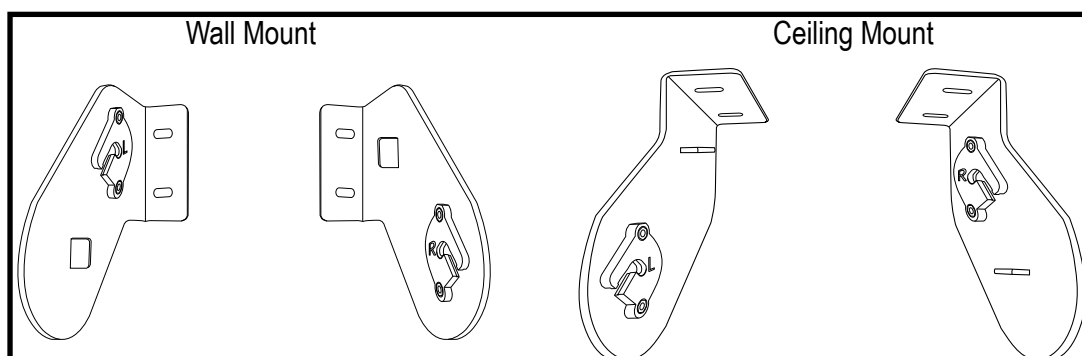

## Parts

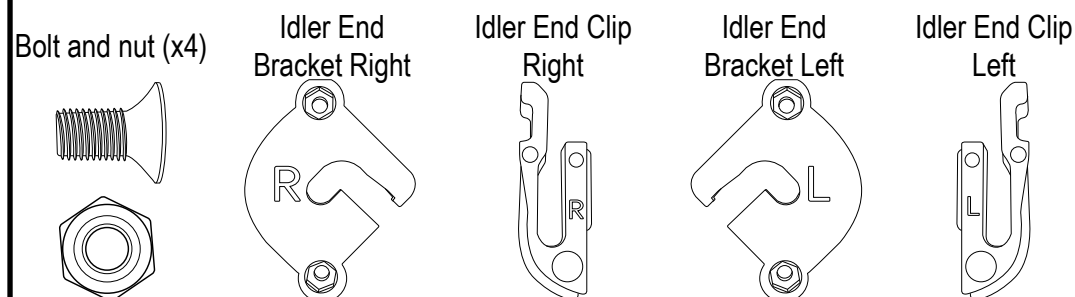


## Installation Instructions

## Step 1

## Build Brackets

The Idler End Brackets need to be installed on the Decorative Dual Shade brackets before installation

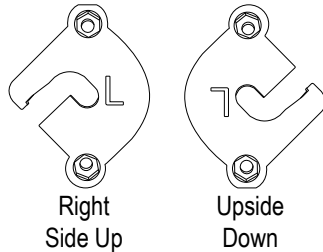


The Idler End Brackets can be installed two ways

If they are installed Right Side Up the shades are installed from the front


If they are installed Upside Down the shades are installed from behind

## Step 1

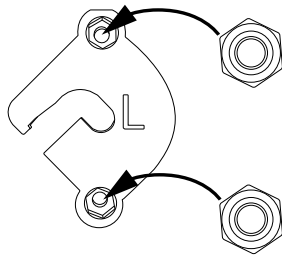


Place the provided nuts into the holes on the Idler End Bracket

## Step 2

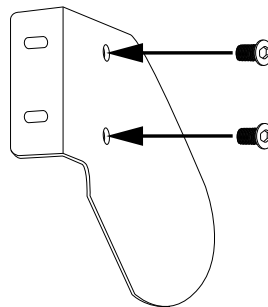


Push the bolts through the outside of the Bracket into the recessed holes

## Step 3

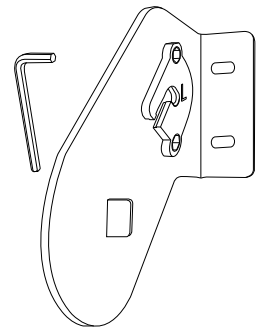


Line up the Idler End Bracket with the bolts and tighten with a 3MM Allen Wrench

Repeat the same process for the other side

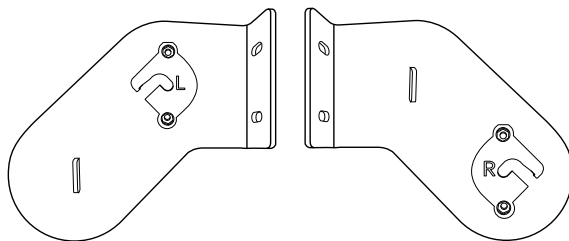

Wall Mount

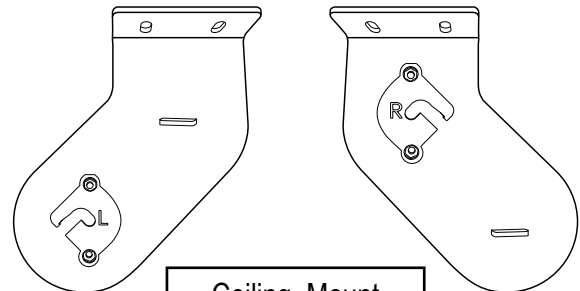


Ceiling Mount


## Step 2

## Install Brackets

Make sure that brackets are level and aligned

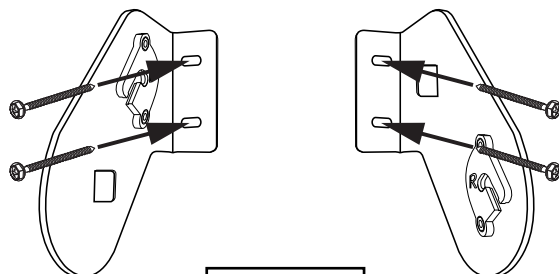

Wall Mount

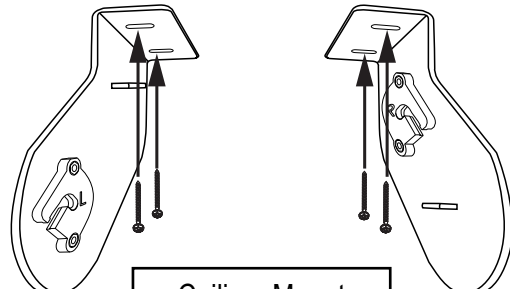

Ceiling Mount


## Installation Instructions

## Step 3


## Install Shades

Start with the Rear shade first to ease installation

Make sure that the shades are rolled up to the roller before installation

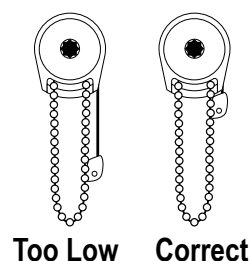


## Step 1

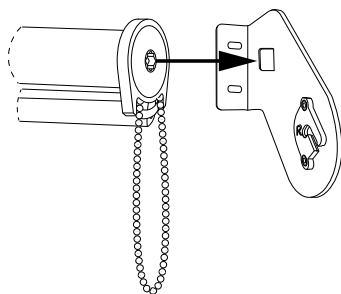


Insert the clutch end into the rear slot on the bracket

## Step 2

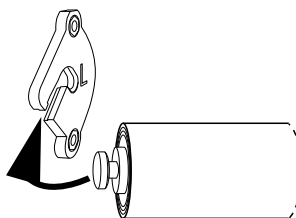

Guide the idler pin end into the Idler Bracket's channel

## Step 3

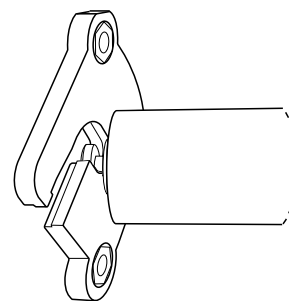


Slide Idler end through the channel and make sure that the idler pin end is seated in the channel of the bracket

## Step 4


## Install Retainer Clip

## Step 1

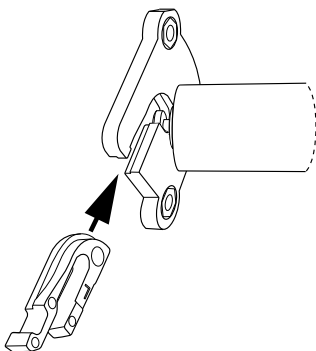

Using the appropriate retainer clip ( L for L bracket and R for R bracket) insert Retainer Clip into channel on the Idler Bracket

## Step 2

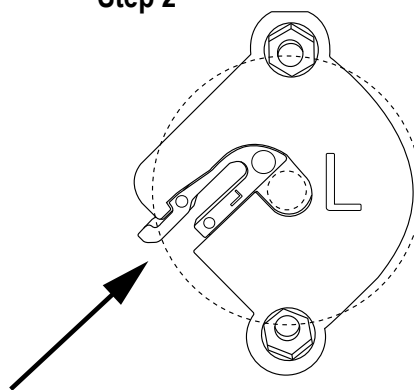


Insert Retainer Clip until it snaps into place

Repeat the steps to install the front shade. The process is the same, though the clutch is on the opposite side


## Installation Instructions

## Step 5

## Operate the Shades

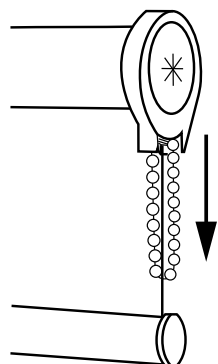

Pull gently on the back side of the chain to lower it.

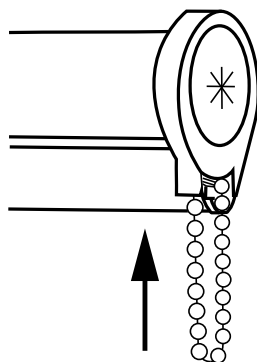

Pull gently on the front side of the chain to raise it.

## Shimming

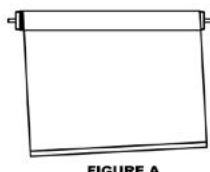
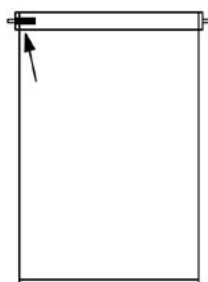


FIGURE A


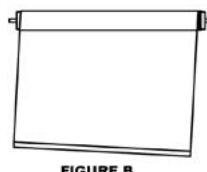


FIGURE B

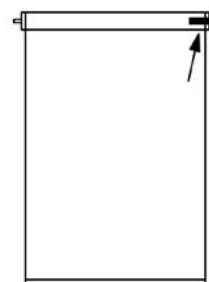


If shade veers toward the right (Fig. A) lower the shade completely and place a 4" strip of masking tape on the roller on the left side. Repeat as necessary until a straight roll is achieved.

If shade veers toward the left (Fig. B) lower the shade completely and place a 4" strip of masking tape on the roller on the right side. Repeat as necessary until a straight roll is achieved.

## Step 6

## Install Cord Tensioner, Hold Down

## Cord Tension Lock



See Cord Tension Lock installation instructions

## Hold Downs



See Hold-Down installation instructions