

genesis®

interior masterpieces®

manh truc®

Installation Instructions



Thank You

Ultra 50 DC Motorized Open Roll & 4" Fascia


Thank you for choosing Genesis Custom Window Shades.

With proper installation and care, your new shades will provide many years of beauty and performance.


Before Installing

Remove shade from the package. Keep all packaging until shade operates to your satisfaction. Contents of your hardware package may vary depending on options chosen. Additional fasteners may be needed on your specific mounting surface.

Tools

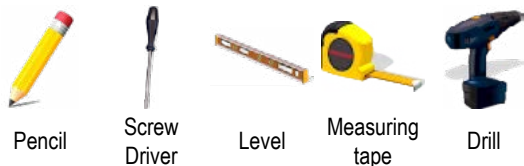

Fasteners

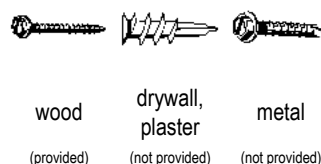

Step 1


Install Brackets

Installation brackets are universal and can be used for inside, outside, ceiling, and reverse roll mounting.


Attach brackets with screws to window frame, molding, wall, or ceiling.
Ensure that brackets are mounted level and flat against mounting surface

Open Roll


Outside Mount

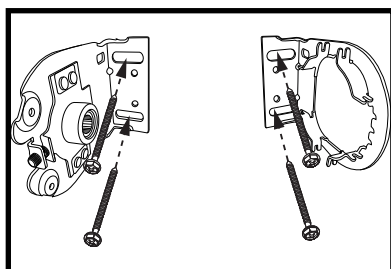

Inside Mount

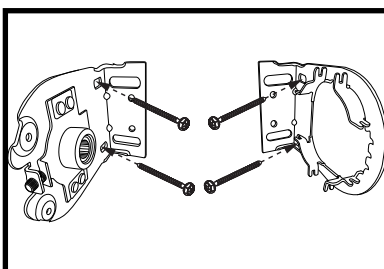


Ceiling Mount

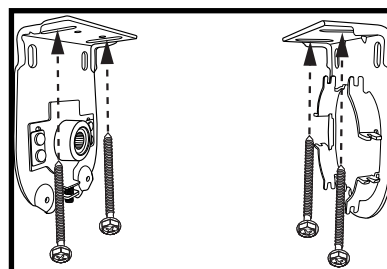


4" Fascia


Outside Mount

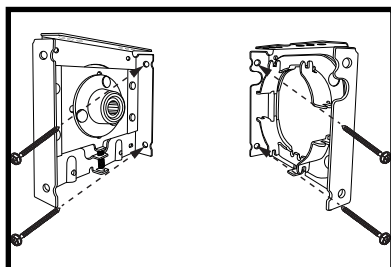

Inside Mount

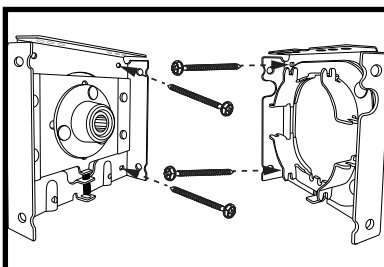


Ceiling Mount

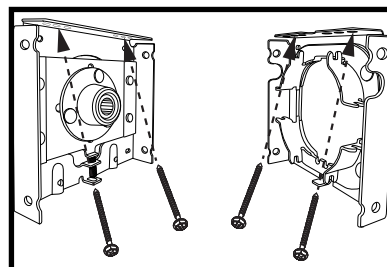

If the motor is on the Left, reverse the bracket position.

Installation Instructions


Step 2 Install the Motor Brace

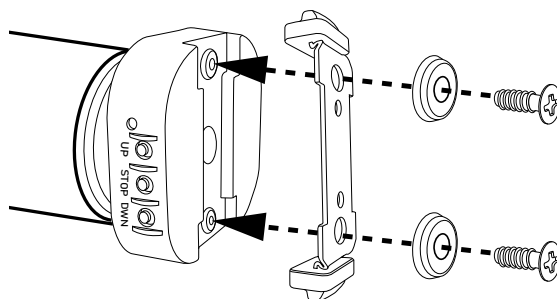

Use the two small screws provided and the washers to install the Motor Brace


Step 3 Install the Shade

Open Roll Step 1

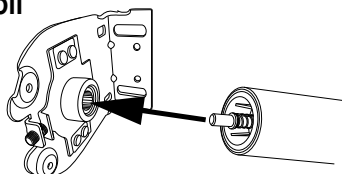


Insert the Spring Loaded Pin end into the round hole in the bracket


4" Fascia

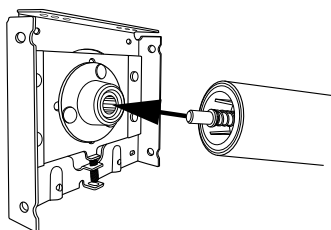

Step 1

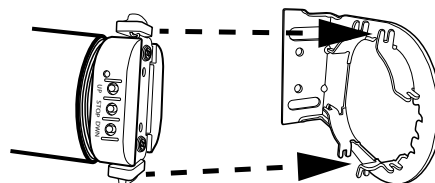


Push the Spring Loaded Pin end in and insert the motorized end into the bracket.

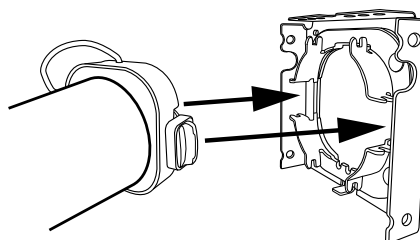


IMPORTANT: Make sure that the Motor Brace lines up with the narrower slots in the bracket and the Buttons are facing either to the Front or Bottom so that they are accessible.

Step 4 Install the Retainer Clip

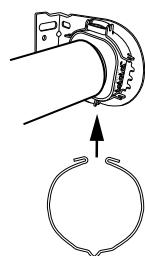


Install the clip around the shade from underneath

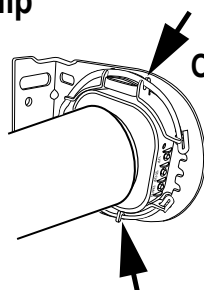

Open Roll

Rotate the Clip around so the Open end is in front of the buttons and guide the clip into the slots on the Bracket

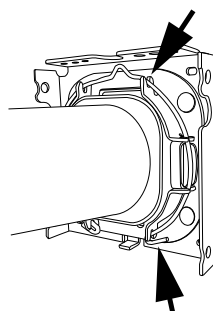

4" Fascia

IMPORTANT: Make sure that the clip is fully inside the channels on the Bracket to ensure the motor end is secure in the bracket.

Installation Instructions


Step 4

Operate the Shade

Check Shade for proper operation. If shade Skews left or right (does not roll up straight), check that the headrail is level.

If headrail is level and the shade still skews, it may require shimming.

Shimming

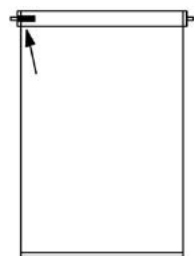

If shade veers toward the right (Fig. A)

Lower the shade completely and place a 4" strip of masking tape on the roller on the left side. Repeat as necessary until a straight roll is achieved.

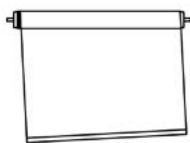



FIGURE A



FIGURE B

If shade veers toward the left (Fig. B)


Lower the shade completely and place a 4" strip of masking tape on the roller on the right side. Repeat as necessary until a straight roll is achieved.

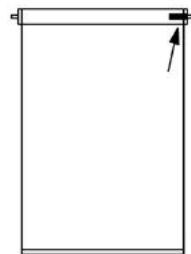

Step 5


Install the Fascia

Step 1

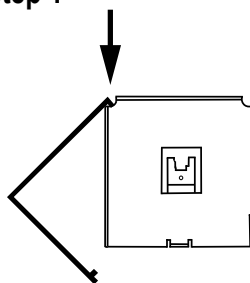

Tilt fascia so that the lip at the top of the fascia can rest into the slots in the top of the bracket


Step 2

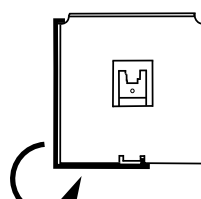

Tilt the fascia forward until it snaps onto the bottom bracket tabs

Step 6

Install the Bracket Covers

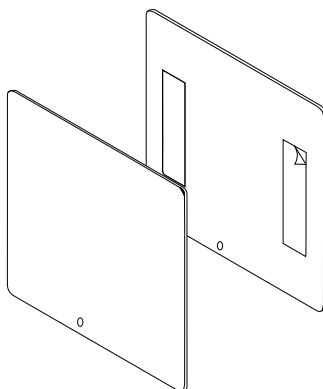

Outside Mount

Peel off the paper and affix the metal bracket cover to the fascia end