

Thank you for choosing our woven woods panel drape. With proper installation and care, your new panel drape will provide many years of beauty and performance.


Before Installing

Keep all packaging until the drapery is fully installed and functioning properly. Open each package and make sure you have the following components.

- Assembled panel drape (1)



- Correct number of brackets. Types are different for wall and ceiling mounts. (See chart under section **BRACKETS REQUIRED** for number required)

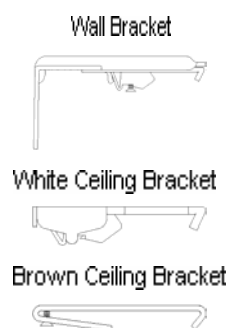

- Fasteners (3 for each wall bracket. 1 for each ceiling bracket. See chart under **TYPES OF FASTENERS** for fastener types)



- Screw stopper (1)



- End caps (2)




- Drapery rod (1)






INSTALLATION TOOLS

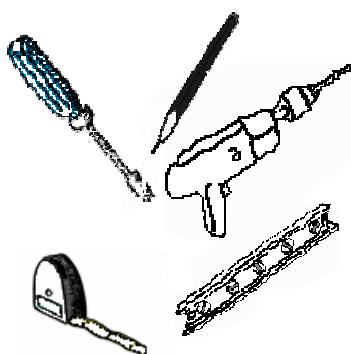- Measuring Tape
- Power Drill, 1/4" Hex or Phillips Driver, and Drill Bits
- Flat Blade Screwdriver
- Phillips Screwdriver
- Carpenter's Level
- Pencil



TYPES OF FASTENERS


Mounting Surface	Required Fastener
Wood	No. 6 Hex Head Screws (Provided) 
Metal	Sheet Metal Screws (Not Provided) 
Drywall, Plaster	Wall Anchors, Expansion Bolts (Not Provided) 

BRACKETS REQUIRED

Refer to the chart below to check on the required number of brackets.

# of Brackets Required	BRACKET WIDTH			
	36" up to 48"	48" up to 72"	72" up to 96"	96" up to 120"
	<u>3</u>	<u>4</u>	<u>5</u>	<u>6</u>

BRACKET SPACING

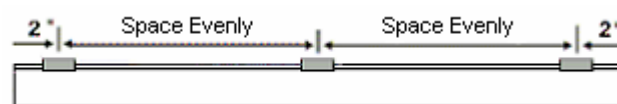

- The center of the end brackets should be marked on the mounting surface 2" in from the ends of the headrail.
- Remaining brackets should be spaced evenly between the end brackets.
- Adjust the bracket placement to avoid any obstructions that may occur.

1 Wall Bracket Installation




A. INSTALLING THE BRACKETS

- Center a bracket over a mark on the mounting surface.
- Making sure the bracket is level and aligned, attach the bracket using the screws provided.
- Repeat this process for the rest of the brackets.



B. INSTALLING THE DRAPERY ROD



- Taking the drapery rod, insert the back edge of the rod into the mounting bracket as shown.
- Then, push up on the drapery rod to snap it in the front.
- Tighten each screw on the bracket to hold the rod securely in place.

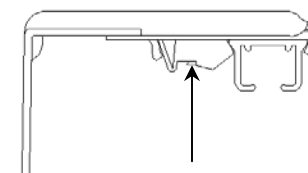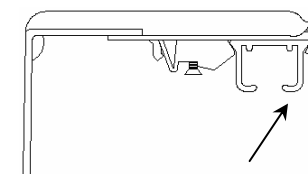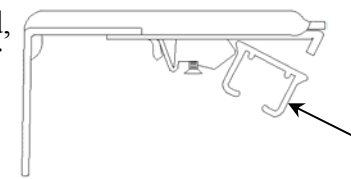

2 Ceiling Bracket Installation




A. INSTALLING THE WHITE BRACKET WITH DRAPERY ROD

- Center a bracket over a mark on the mounting surface.
- Drill a screw up through the hole in the bracket, but **DO NOT** tighten the screw yet!
- Repeat the previous steps for the remaining brackets.
- Install the drapery rod by inserting the back edge of the drapery rod into the bracket and push back.
- Push up on the front of the drapery rod. If done correctly, you should hear the rod snap into the bracket.
- Tighten the screw on all brackets.

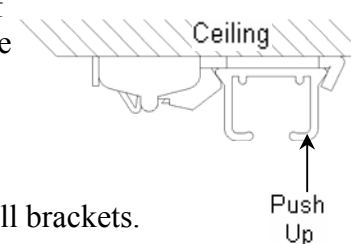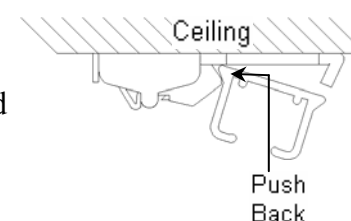


B. INTALLING THE BROWN BRACKET WITH DRAPERY ROD

- Center a bracket over a mark on the mounting surface.
- Drill a screw up through the hole in the bracket, but **DO NOT TIGHTEN** the screw yet!
- Repeat the previous steps for the remaining brackets.
- Install the drapery rod by sliding the end of the drapery rod through the brackets until each bracket is holding the rod.
- Making sure the rod is positioned correctly, tighten the screw on all brackets.

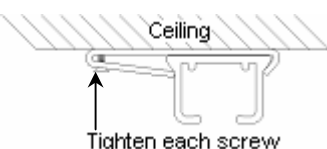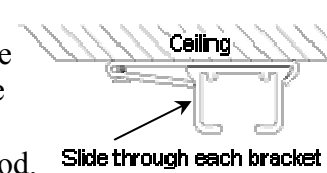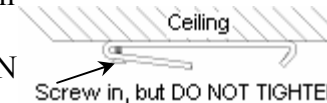


3 Installing Panel Drape


- First make sure the end caps are **not** inserted into the ends of the drapery rod.
- Making sure that the front of the panel drape is showing, start to insert each of the carriers into the end of the drapery rod.

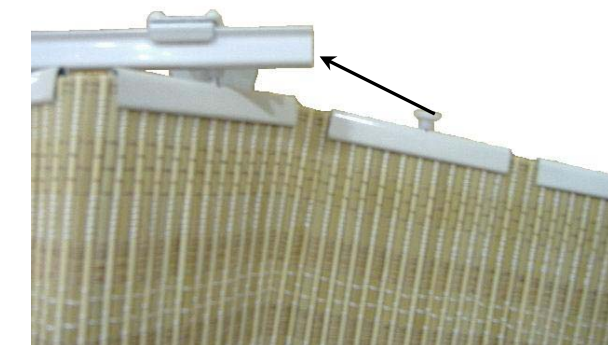


- For the end that has to be stationary, insert a screw stopper into the correct end of the drapery rod before you insert the final carrier.

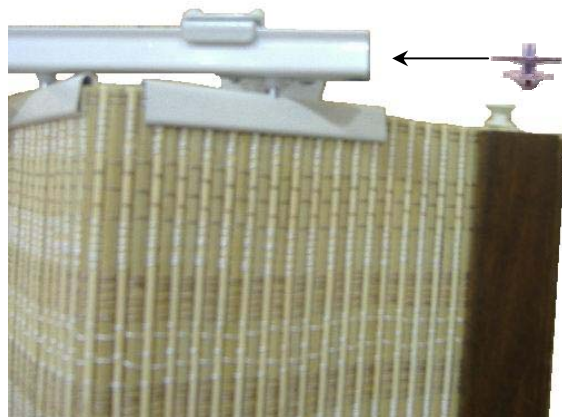

- After inserting the final carrier, insert an end cap on the stationary side and tighten it with a screwdriver.

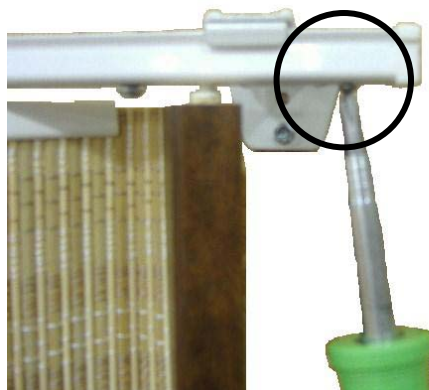

- Tighten the screw stopper, making sure the carrier is right in between the screw stopper and the end cap screw.

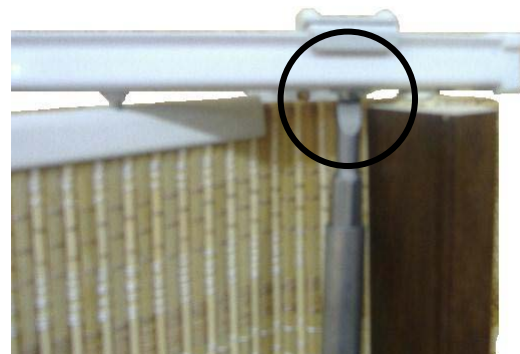

4 Care and Cleaning

If your woven wood panel drape ever become dusty or dirty, use a lightly dampened cloth and gently apply it to the drape. It is not advised to submerge the shade entirely in water.

5 Troubleshooting

<u>Problem</u>	<u>Solution</u>
The drapery rod will not fit in all of the brackets.	Make sure all of the brackets are level and aligned. Also make sure that the screws are loose enough on the bracket.



ITEM #18-5704-00

**Installation and Care Instructions
For
Panel Drapes**