

genesis®

manh truc®

allure®

# Installation Instructions

## Majesty Noble and Fabric Wrapped Valance




### Thank You

Thank you for choosing Genesis Custom Window Shades. With proper installation and care, your new shades will provide many years of beauty and performance.


### Before Installing

Remove shade from the package. Keep all packaging until shade operates to your satisfaction. Contents of your hardware package may vary depending on options chosen. Additional fasteners may be needed on your specific mounting surface.

#### Tools

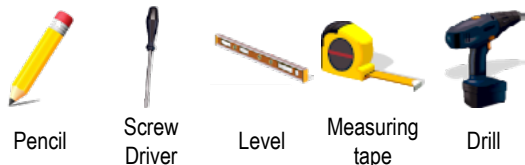


#### Fasteners

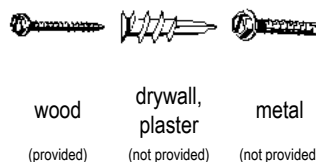


### Valances


#### Fabric Wrapped

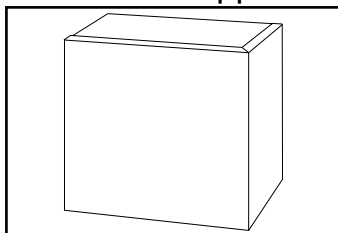

#### Noble

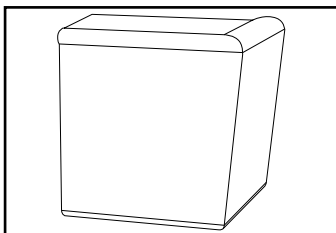


#### Majesty

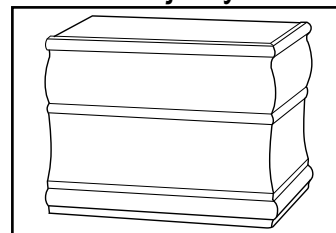


### Parts

#### Brackets

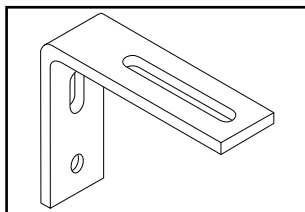

#### Screws

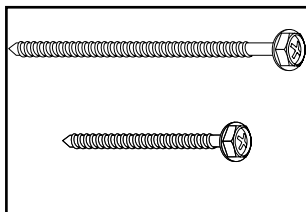


For **Inside Mount** installations, no brackets are necessary. 3" screws are provided to secure shade directly to window opening, but they should still be spaced evenly across the board

For **Outside Mount** installations, brackets are necessary. 1 1/2" screws are provided to secure the bracket to the wall and 3/4" screws are provided to secure the bracket to the board

### Step 1

#### Space Brackets in Window

Measure 2" in from each end of the headrail and mark the bracket location on the mounting surface. Space additional brackets evenly between the end brackets.

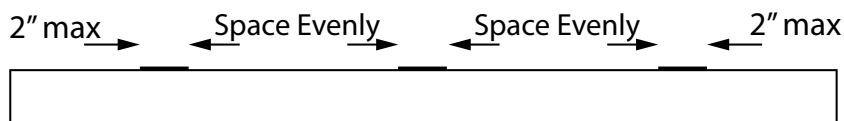

Use a Level to make sure the mounting surface is level

genesis®


manh truc®

allure®

## Installation Instructions

### Step 2 Install Brackets

Once bracket locations are marked on the mounting surface begin installing the brackets

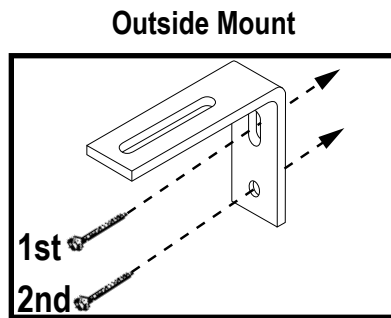


Begin installing the brackets by using the elongated hole first in case any adjustments must be made.

The brackets **must be level** to ensure proper operation of the shade.

Once the brackets are properly aligned use the second, round hole on the bracket to secure to mounting surface


### Step 3 Install Board

Once bracket locations are marked on the mounting surface begin installing the brackets

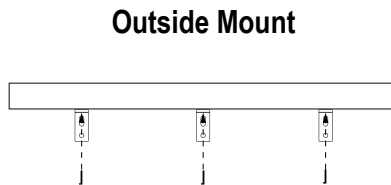

Center board on top of mounted brackets

Place 3/4" screw up from the bottom of the board and into the slotted channel on bracket

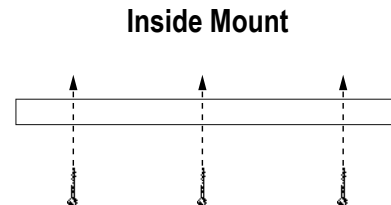

Pre-drill with a 1/8" drill bit

Run screws through board into mounting surface

### Step 4 Attach Valance (Fabric Wrapped)

